



## How-To:

# Getting Started

## Turning Your Phone On and Off

**On** – Press and hold the  **Power/Lock Key** for three seconds. While powering on, the phone connects with the wireless network, and then displays the Home screen and active alerts.

**Off** – Press and hold the  **Power/Lock Key** for two seconds. After the prompt, tap **Power Off**.



## Set-Up Wizard

The first time you turn on your phone, the Set-Up Wizard will prompt you to customize your phone.

Follow the prompts to set:

- **Language** – Choose English or Spanish.
- **Backup Assistant** – Save your contacts to a secure website.
- **Add Accounts** – Configure access to your Facebook®, Twitter®, MySpace™, corporate or Google™ accounts.
- **My Location** – Configure your phone's use of location services.

## Your Google™ Account

Your phone uses your Google account to fully utilize its Android™ features, including Gmail™, Google Talk™ and the Android Market™. When you turn on your phone for the first time, set up a connection with your existing Google account by logging in to it, or create a new Google account.

If you want to add accounts after the initial setup, you can do so from the Home screen by pressing  **Menu > Settings > Accounts & sync > Manage Accounts > Add accounts.**

## Using Swype®



When typing on the Samsung Galaxy S™, you will notice a different keyboard style. The default on-screen keyboard for the Galaxy uses Swype technology, which allows you to “type” words by using a continuous swipe of your fingertip across the letters contained within the word. For example, to type the word "quick," you would start by touching the letter "Q" and then dragging your finger to the rest of the letters in the word.

The patented technology allows Swype to accurately detect what word you’re typing. If it is unsure which word was typed, you will be presented with a list of options. You can also use Swype like a typical keyboard by tapping individual letters.

There are two more options for keyboard layouts built into the device: Android and Samsung. To choose from among the three options, press and hold a data entry field. A pop-up box will appear listing all three keyboard styles.

To configure your Swype settings:

1. Go to  **Applications > Settings > Language & Keyboard > Swype.**

2. The Swype settings menu will appear. Scroll down the menu and place a checkmark beside each of the preferred options:
  - **Word Prediction**
  - **Audio Feedback**
  - **Vibrate on Keypress**
  - **Enable Tip Indicator** (flashing help indicator)
  - **Auto-spacing**
  - **Auto-capitalization**
3. Choose operational preferences, and then use the corresponding sliding bar to set:
  - **Display Trace** (how long the trace should remain visible)
  - **Word Choice Window** (how often you want word choice windows displayed)
  - **Speed vs. Accuracy** (how quickly Swype responds to input)
4. After going through the list and making all of the selections, you can take a quick tutorial to practice input. Scroll down to the Help section and touch **Tutorial**, or for other questions, touch **Swype Help**.

## Making a Call

After the initial setup process has finished, you'll be ready to use your Galaxy. To make a call press the  Phone icon on the Home screen. From this point, you can make calls several different ways:

- Using the touch screen **Phone Dialer** to enter the phone number or speed dial number
- Calling a contact from **Contacts**
- Calling a contact from **Favorites**
- Returning a call or contacting a recent caller from the **Call Log**
- Using **Voice Commands**



### ***Making a call using the phone dialer***

1. From a Home screen, press **Phone**.
2. Touch the digits of the telephone or speed dial number on the **Dialer** keypad. While dialing, you can choose from these options by pressing the  phone icon, then the  Menu key:
  - Touch  Menu > Speed Dial Setting – To dial or set speed dial numbers
  - Touch  Menu > Add 2 sec pause – To insert a two-second pause in the telephone number
  - Touch  Menu > Add wait – To pause dialing the telephone number to wait for input from you
3. Touch the Phone button to place the call.

### ***Making a call using speed dial***

A speed dial number is a one-, two- or three-digit shortcut (from 1 to 100) you assign to contacts allowing you to quickly call them. To add a new speed dial number, start on the Home screen and press  **Phone** >  **Menu** > **Speed dial setting** > **Select the number you wish to assign** > **Select the contact from your address book**.

**Note:** Some speed dial numbers are reserved by default and cannot be assigned. For example, the number 1 is reserved for voice mail and cannot be assigned to a contact.

### ***Sending calls to voice mail***

When your phone alerts you to an incoming call, you can ignore the call and send the caller to voice mail, or ignore the call and send a message to the caller.

- **Ignore a call** – With the phone unlocked or locked, touch and drag the red Ignore button.
- **Ignore a call with a message** – With the phone unlocked or locked, touch and drag **Reject call with a message**. You will be prompted to create a new message that will then be sent to the caller.

### ***Answering call waiting***

To answer an incoming call while on a call,

- Touch and drag the **Answer** button to answer the incoming call. The original call is placed on hold and remains on hold until you end the second call or return to the original call.
- Touch **Swap** to place the second call on hold and return to the original call.



### ***In-Call Options***

While on a call, you can use these features:

- **Add call** - Display the dialer to set up a multi-party call.
- **End call** - End the phone call.
- **Dialpad** - Display a dial pad to enter numbers.
- **Speaker** - Enable or disable the speakerphone.
- **Mute** – Enable or disable the mute function.
- **Bluetooth®** - Switch the call's audio to a Bluetooth headset.

### ***Ending a call***

To end a call, press the red **End Call** button.

## **The Call Log**

When you place, answer or miss a call, a record of the call is saved in the call log. Access the call log from the Home screen by pressing  **Phone > Call log**.

### ***Making a call using the call log***

1. From a Home screen, touch  **Phone > Call log**.

2. To call a specific entry in the call log, hold and drag that entry to the right.

#### ***Sending a message using the call log***

3. From a Home screen, touch  **Phone > Call log**.
4. To send a message to a specific entry in the call log, hold and drag that entry to the left. You will be routed to a compose text screen with the contact entered in the **To** field.

**Note:** If you are using a third-party SMS application, you may be prompted to select which app to use. You can check the Use by Default button to set an application as the default for this particular action.

#### ***Creating or updating contacts using the call log***

1. From the Home screen, touch  **Phone > Call log**.
2. Touch and hold a call record, then press **Add to Contacts** from the pop-up menu.
3. Choose **Create contact** or **Update existing**.

#### ***Deleting call log records***

1. From a Home screen, touch  **Phone > Call log**.
2. While viewing the call log, touch  **Menu > Delete**.
3. Touch individual call records to mark them for deletion, or touch **Select all**. A check appears in the check box to show marked records.
4. Touch **Delete** to delete marked records.

#### ***Filtering call log records***

1. From a Home screen, touch  **Phone > Call log**.
2. While viewing the Call log, touch  **Menu > View by**.
3. Select a filter type: **All calls**, **Missed calls**, **Outgoing calls** or **Incoming calls**.

#### ***Viewing call durations***

View the length of the last call, all dialed calls, all received calls or all calls.

1. From the Home screen, touch  **Phone > Call log**.
2. While viewing the call log, touch  **Menu > View Call timer**.

## **Voice Mail**

By subscribing to the voice mail feature, all unanswered calls will be sent to voice mail – even if your phone is turned off. Set up your voice mail and personal greeting as soon as you activate your phone.

#### ***Setting up voice mail***

1. From a Home screen, touch  **Phone**, then **press and hold 1** to access your voice mail.
2. Follow the automated instructions to set up your password and record a greeting.

### Checking voice mail

1. From a Home screen, touch  **Phone**, then **press and hold 1** to access your voice mail.
2. Follow the automated instructions to check your messages.

## Customizing the Four Primary Shortcuts



1. From a Home screen, touch  **Applications**.
2. Touch  **Menu > Edit**.
3. Touch and hold an icon then drag it to replace one of the four primary shortcuts.
4. When you are finished, touch  **Menu > Save**.

## Text and Multimedia Messaging

### Creating and Sending Messages

1. From a Home screen, touch, **Messaging > New Message**.
2. Tap the **To** field and enter the recipient's name, phone number or email address.
3. Touch the **Type to compose** field, or touch **Next** and compose your message. While composing a message, touch **Menu** for these options:
  - **Add Subject** - Add a subject field to the message and enter a subject. This option also converts the message to MMS.
  - **Attach** - Add content to the message to convert it to MMS. Choose from among these options:
    - **Pictures** - Add a picture.
    - **Capture pictures** - Take a new picture.
    - **Videos** - Add a video.
    - **Capture video** - Record a new video.
    - **Audio** - Add a sound clip.
    - **Record Audio** - Create a new audio clip.
    - **Slideshow** - Add a slideshow of pictures to this message.
  - **Add text** - Select text from Contacts, Calendar, or Memo to add to the message.

- **Insert Smiley** - Add a text emoticon to the message.
  - **Cancel** - Discard the message.
4. Touch **Send** to send the message.

**Note:** As you enter a name, phone number or email address, matching contacts appear on the screen. Touch a contact to add it to the list, or continue entering characters.

## Managing Messages

### *Threaded view*

1. From a Home screen, touch **Messaging**.
2. Message threads display by contact, number or address. While viewing message threads, you have these options:
  - Touch and hold a thread to choose from:
    - **View Contact/ Add to contacts** - View the contact record, save the sender/recipient's information as a new contact, or update an existing contact.
    - **Delete thread** - Erase the entire message thread.
  - Touch  **Menu** for these options:
    - **Compose** - Create a new text message.
    - **Delete threads** - Touch message threads to mark them for erasure, or touch **Select all** to mark all message threads for erasure.
    - **Search** - Enter characters to search messages and recipient lists.
    - **Settings** - Configure message settings.

## Message Settings

### *Configure message settings*

1. From a Home screen, touch **Messaging**.
2. Touch  **Menu > Setting** to set:
  - **Delete old messages** - Enable or disable automatic erasure of messages when stored messages reach default limits. When disabled, the phone will prompt you to delete old messages to make room.
  - **Text message limit** - Set a limit for the number of text messages per thread.
  - **Multimedia message limit** - Set a limit for the number of multimedia messages per thread.
  - **Delivery reports** - Request a report of delivery date and time for all messages sent.

- **Auto-retrieve** - Enable or disable automatic retrieval of MMS messages. When enabled, MMS messages download automatically. When disabled, the phone prompts to download new MMS messages.
- **Roaming auto-retrieve** - Enable or disable automatic retrieval of MMS messages when in Roaming mode. When enabled, MMS messages download and display automatically. When disabled, the phone prompts you to download new MMS messages.
- **Notifications** - Enable or disable alerts in the status bar.
- **Screen on** - Enable screen on for notification alerts.
- **Select ringtone** - Select a ringtone for message alerts.
- **Vibrate** - Enable or disable vibration for message alerts.

## Gmail™

Send and receive emails via Gmail, Google's™ webmail service. From the Home screen, press  **Applications > Gmail**.

### Setting Up Your Gmail Account

5. From a Home screen, press  **Applications > Gmail**.
6. At the **Set up your Google Account** screen, touch **Next** to begin, then touch an option:
  - **Create** - Follow the prompts to create a new account.
  - **Sign in** - Enter your Google Username and Password, and then touch **Sign in**.
7. The phone communicates with the Google server to set up your account and synchronize your email. When complete your Gmail appears in the Inbox.

### Refreshing Your Gmail Account

Refresh your account to update your phone from the Gmail servers.

1. From a Home screen, press  **Applications > Gmail**.
2. Touch  **Menu > Refresh**.

## Managing your Gmail Account

Options are available for managing your Gmail.

1. From a Home screen, press  **Applications > Gmail**.
2. Touch  **Menu** for these options:
  - **Refresh** - Update your phone from the Gmail servers.
  - **Compose** - Create and send new Gmail.
  - **Accounts** - Choose a Gmail account to display, or add a Google account.
  - **View labels** - View Gmail by label.
  - **Search** - Enter keywords to search mail.
  - **Settings** - Configure Gmail account settings.

## Composing and Sending Gmail

1. From a Home screen, touch  **Applications > Gmail**.
2. Touch  **Menu > Compose**.
3. Touch the **To** field to enter recipients. As you enter names or numbers, matching contacts display. Touch a contact to add it to the field.
4. Touch the **Subject** field to enter a subject.
5. Touch **Compose Mail** to enter the text of your email.
6. While composing a message, touch  **Menu** for these options:
  - **Send** - Send the message.
  - **Add Cc/Bcc** - Create Cc (copy) and Bcc (blind copy) fields to the message. After creating the fields, touch to enter recipients.
  - **Attach** - Launch Gallery to select a picture to add to the message.
  - **Edit subject** - Modify the email's subject.
  - **Discard** - Close the message without saving.
7. Touch **Send** to send the message.

## Gmail Account Settings:

1. From a Home screen, press  **Applications > Gmail**.
2. Touch  **Menu** for these options:
  - **Refresh** - Update Gmail on your phone from the Google servers.

- **Compose** - Create a new email.
- **Accounts** - View and choose from your Google account(s).
- **View labels** - View Google content by label.
- **Search** - Find Gmail items.
- **Settings** -
  - **Signature** - Create a text signature to add to outgoing messages.
  - **Confirm delete** - Have your phone prompt you to confirm deletions.
  - **Batch operations** - Allow changes to labels on more than one conversation.
  - **Clear search history** - Remove previous searches you have performed.
  - **Labels** - Choose which labels are synchronized.
  - **Email notifications** - When enabled, notifications for new email appear in the Notifications Panel.
  - **Select Ringtone** - Choose a ringtone for new email notifications.
  - **Vibrate** - When enabled, the phone will vibrate for new email notifications, along with the ringtone (if a ringtone is selected).

## Google Talk™ Instant Messaging Service

From the Home Screen, press  **Applications > Google Talk** to chat with other Google Talk users.

**Note:** Google Talk requires that you have a Google account set up on your phone. If you have already set up your Google account, you are automatically logged in. If you do not have a Google account, touch **Create** to create one.

## Email

You can configure most email accounts in just a few steps.

### Setting Up the First Email Account

1. From a Home screen, press  **Applications > Email**.
2. Touch **Email address** to enter your email address. Then touch **Password** or touch **Next** to enter your password.
3. Touch a setup option:

- **Manual Setup** - Configure the account manually. Touch POP3, IMAP or Exchange and enter the account details.
- **Next** - Connect to the server to set up the account automatically. Follow the prompts to complete setup, then touch Done.

## Setting Up Additional Email Accounts

1. From a Home screen, touch  **Applications > Email**.
2. Touch  **Menu > Accounts**.
3. Touch  **Menu > Add account**.
4. Touch the **Email address** field to enter your email address.
5. Touch the **Password** field or touch **Next** to enter your password.
6. Touch a setup option:
  - **Manual Setup** - Configure the account manually. Touch POP3, IMAP or Exchange and enter the account details.
  - **Next** - Connect to the server to set up the account automatically. Follow the prompts to complete setup, then touch Done.

## Composing and Sending Email

1. From a Home screen, touch  **Applications > Email**.
2. Touch and hold on an account, then touch **Compose**.
3. Touch the **To** field to enter recipients. As you enter names or numbers, matching contacts display. Touch a contact to add it to the field.
4. Touch the **Subject** field to enter a subject.
5. Touch the **text field** to enter the text of your email.
6. While composing a message, touch  **Menu** for these options:
  - **Add Cc/Bcc** - Create (copy) and Bcc (blind copy) fields to the message. After creating the fields, touch to enter recipients.
  - **Save as draft** - Close the message and save it in Drafts.
  - **Add text** - Add text from a Contact record, from the Calendar or from a Memo.
7. Touch **Attach** to add a file to the message.
8. Touch **Send** to send the message.

## Managing Emails

### ***Combined Inbox***

Emails you receive to all accounts are presented in the combined Inbox, or you can view email accounts individually.

1. Touch  **Menu > Accounts.**
2. Touch an account, or touch the Combined Inbox.

### ***Refreshing your email account***

Refresh your account to update your phone from the servers.

1. From a Home screen, touch  **Applications > Email.**
2. Touch  **Menu > Refresh.**

### ***Email account settings***

1. From a Home screen, touch  **Applications > Email.**
2. Touch an account to view it, then touch  **Menu > Account settings.**
3. Touch fields to configure the account:
  - **General settings:**
    - **Account Name** - Enter a name for the account's display.
    - **Your name** - Enter your name, to be used on emails.
    - **Email check frequency** - Choose an interval to check for email.
    - **Default account** - When enabled this account is the default account for sending email from your phone.
  - **Notification settings:**
    - **Email notifications** - Enable or disable alerts in the Status Bar.
    - **Select ringtone** - Choose a ringtone to use for new email alerts.
  - **Server settings:**
    - **Incoming settings** - Modify incoming email server settings.
    - **Outgoing settings** - Configure the SMTP server, Port and Security type, and Username and Password settings.
  - **Common settings:**
    - **Forward with files** - Forward any attachments with an email.
    - **Signature** - Send a signature with the message.

## Web and Social Networking

## View and Upload YouTube™ Videos

View and upload YouTube videos from your phone.

- From a Home screen, touch  **Applications > YouTube** to launch this service.
- From a Home screen, touch  **Applications > Gallery > Camera** to upload a video.
- Press and hold the video you want to share and select **Share**.
- Choose **YouTube** as the channel to which you want to upload the video.

The Galaxy is equipped with a full HTML browser allowing you to access the Internet.

- From a Home screen, touch **Browser**.

## Navigating the Web

Use the following command keys/actions when navigating the Web:

- Touch  **Back** to return to the previous page.
- Touch and hold  **Back** to display a list of recently visited pages.
- To go forward, touch  **Menu > Forward**.
- Touch and drag your finger on the screen to navigate pages and to reposition pages within the screen.
- Tap the screen twice to zoom in or out.
- Touch an item to select it.
- Touch a hyperlink to follow it.
- Touch and hold a hyperlink for these options:
  - **Open** - Go to the linked page.
  - **Open in new window** - Open a new window to display the linked page.
  - **Bookmark link** - Add a bookmark to the linked page (without loading it).
  - **Save link** - Save the linked page to download history.
  - **Share link** - Send the link via Bluetooth®, email, Gmail™ or as a message.
  - **Copy link URL** - Save the link's URL to the clipboard.

## Entering Text in a Field

While browsing, touch a text field on a Web page to display the virtual QWERTY keyboard.

## Entering a URL

Access a website quickly by entering the URL.

1. From a Home screen, touch **Browser**.
2. Touch the **URL field** at the top of the screen, and type the desired destination.
3. Once entered, touch and hold the URL in the URL field for the following options:
  - **Share page** – Send the link via Bluetooth®, Gmail™ or messaging.
  - **Copy page URL** – Save the link's URL to the clipboard.

## Browser Menu

While viewing a Web page, touch  **Menu** for these options:

- **New window** - Open a new browser window. The previous browser windows remain open in the background. (Use the Windows option to switch between windows.)
- **Bookmarks** - Create and manage bookmarks for favorite sites.
- **Windows** - Switch between windows or open a new window.
- **Refresh** - Update the current page's content from the server.
- **Forward** - Move forward to a previously viewed page.
- **More** -
  - **Add bookmark** - Create a bookmark for the current page.
  - **Find on page** - Search for content on the current page.
  - **Select text** - Enable the text selector. This returns you to the Web page where you can drag your finger over text to select it and copy it to the clipboard.
  - **Page info** - View information about the current page, including the URL.
  - **Share page** - Send the current page's URL via Bluetooth®, Facebook®, Gmail™, messaging or Yahoo!® mail.
  - **Downloads** - View a list of downloads. While viewing downloads, touch  Menu for access to clear the list and cancel all download commands.
  - **Settings** - Customize the browser. (See Browser Settings.)
  - **Brightness setting** - Adjust the screen brightness, if it is not set to Automatic.

## Browser Settings

1. From a Home screen, touch **Browser**.
2. Touch  **Menu > More > Settings**.

### ***Page content settings***

- **Text size** - Choose a default size for Web page content.
- **Default zoom** - Choose a default zoom level for Web pages.
- **Open pages in overview** - When enabled, this setting displays an overview of newly opened pages.
- **Text encoding** - Choose a default character set for Web pages.
- **Block pop-up windows** - When enabled, pop-up windows are blocked.
- **Load images** - When enabled, images automatically load on a Web page. When disabled, images are indicated by a link, which you can touch to download.
- **Auto-fit pages** - When enabled, the browser automatically sizes Web pages to fit your phone's display.
- **Landscape-only display** - When enabled, the browser displays all pages in the wider landscape orientation. (Rotate your phone counterclockwise to view pages in landscape mode.)
- **Enable JavaScript** - When enabled, the browser will automatically run JavaScript on the pages you visit.
- **Enable plug-ins** - When enabled, the browser will automatically load and run plug-ins on the pages you visit.
- **Open in background** - When enabled, new windows open behind the current window.
- **Set home page** - View and set the default first page that displays when you launch the browser.

### ***Privacy settings***

- **Clear cache** - Delete content and databases stored on the phone.
- **Clear history** - Delete the list of previously visited pages.
- **Accept cookies** - When enabled, the browser saves and reads cookie information used by Web pages.
- **Clear all cookie data** - Delete cookie information saved to the phone.
- **Remember form data** - When enabled, the browser stores information entered into forms to make future form completion easier.
- **Clear form data** - Delete saved form information.
- **Enable location** - When enabled, sites you visit can request access to your location.
- **Clear location access** - Clear location access for all websites.

### ***Security settings***

- **Remember passwords** - When enabled, the browser saves usernames and passwords for the sites you visit to make logging in during future visits easier.
- **Clear passwords** - Clear all saved usernames and passwords.

- **Show security warnings** - When enabled, the browser will warn you if there is a problem with a website's security.

### ***Advanced settings***

- **Website settings** - View and manage settings for individual websites.
- **Reset to default** - Clear all browser data and reset all settings to the factory defaults.

## **Maps**

Use Google Maps™ mapping service to find your current location and request directions and other location-based information.

**Note:** You must enable location services to use Google Maps, and some features require standalone or Google location services. (To enable locations services, touch **Browser** >  **Menu** > **More** > **Settings** > **Privacy Settings** > **Enable Location**.)

From a Home screen, scroll to panel 3 and touch **Maps**.

### **Navigating the Map**

- **Zooming**
  - Double tap the screen to zoom.
  - Touch Zoom in or Zoom out.
- **Scrolling**
  - Touch and drag the screen to reposition the map in the display.
- **Touch**
  - Touch and hold an area of the map to display pop-up information about the location.
- Touch a pop-up for these options:
  - **What's nearby** - Display nearby points of interest.
  - **Search nearby** - Enter search criteria to find nearby points of interest.
  - **Share this place** - Share information about a location through Twitter®, Facebook®, messaging, Gmail™ or Yahoo!® mail, or send it to a Bluetooth® device.
  - **Report a problem** - Send an error report to Google Maps.

## Maps Menu

- From a Home screen, touch  **Applications > Maps**.
- While viewing a map, touch  **Menu** for these options:
  - **Search** - Enter text criteria to find locations or points of interest.
  - **Directions** - Get driving, public transport or walking directions.
  - **Layers** - Choose map layers to display.
  - **My Location** - Indicate your location on the map. (This requires Google location services. To enable location services, touch  Menu > settings > Location & security.)
  - **Join Latitude** - Use the Google Latitude™ location service to share locations and status updates with other Google Latitude users.
  - **More**
    - **Clear map** - Remove search results from the map.
    - **Starred items** - Synchronize your starred map items with Google maps.
    - **Labs** - Access experimental features.
    - **Help** - Display a searchable Google Mobile Help screen.
    - **Terms, Privacy & Notices** - Display legal information.
    - **About** - Display information about Google Maps

## Music

### Amazon MP3

Amazon MP3 is a digital music store owned by Amazon.com. Using Amazon MP3 you can download digital rights management-free (DRM-Free) MP3 formatted songs and albums.

1. From a Home screen, touch  **Applications > Amazon MP3**.
2. Touch one of the categories to begin browsing music files.
3. Follow the on-screen instructions to download music.

**Note:** A data service is required to use this feature. Charges may apply depending on your data plan or feature.

## Music Player

The music player plays songs from an optional installed memory card. A 16GB microSD™ card comes with the Galaxy S.



## Playing Music

1. From a Home screen, touch  **Applications > Music Player**.
2. The music player scans your memory card and displays your songs on the All, Playlists, Albums, Artists or Genres tabs.
3. Touch a song or playlist to begin playback.
4. During playback, use the sound and playlist controls:
  - **Volume** - Touch to activate on-screen volume control. Then, touch and drag your finger on the scale to set the volume. You can also press the volume key on the side of the phone to adjust playback volume.
  - **Shuffle** - When enabled, songs play in random order. When disabled, songs play in the order they appear in the list view.
  - **Repeat** - Touch to repeat the current song, repeat all songs or disable repeat mode.

## Organizer View

From Disc view, switch to Organizer view to view and select songs alphabetically, or sorted by playlist, album, artist or genre.



1. From a Home screen, touch **Music Player**.
2. Touch  **Menu > Go to Disc view**.
3. Touch the **arrow** at the top of the screen for Organizer view.

In Organizer view, you can use these controls:

- By default, Organizer view displays all songs. Touch **All** in the top left corner to choose songs by playlist, album, artist or genre.
- Slide your finger around the dial to scroll through songs.
- Touch a song in the center of the dial to play it.
- Touch to pause playback. Touch again to resume playback.
- Touch the double arrow in the dial to switch to Disc view.
- Touch Back to return to the default Music Player screen.

## Playlists

### *Creating a playlist*

1. From a Home screen, touch  **Applications > Music Player > Playlists**.
2. Touch  **Menu > Create**. Then touch the name field to enter a name for the playlist.
3. Touch **Save** to save the new playlist.

### *Adding songs to a playlist*

- To add a single song to a playlist:
  1. From a Home screen, touch  **Applications > Music Player**.
  2. Touch and hold a song, then choose **Add to playlist** from the pop-up menu.
  3. Choose one of these options:
    - Touch a playlist to add the selected song.
    - Touch Create playlist to create a new playlist and add the selected song to it.
- To add multiple songs to a playlist:
  1. From a Home screen, touch  **Applications > Music Player**.
  2. Touch  **Menu > Add to playlist**.

3. Touch songs to select them or touch Select all. When selected, a checkmark appears in the checkbox.
4. Touch **Add** and then select a playlist or touch Create playlist to create a new playlist.

## Setting a Song as a Ringtone


You can set a song as a ringtone for all voice calls, for calls from an individual contact, or as an alarm tone.

1. From a Home screen, touch  **Applications > Music Player**.
2. Touch and hold a song, then touch **Set as** and choose from these options:
  - Voice call ringtone – Set the song as the default ringtone for all incoming voice calls.
  - Caller ringtone – Set the song as the ringtone for calls from a specific contact.
  - Alarm tone – Set the song as the alarm ringtone for a new alarm or an existing alarm

## Pictures and Video

Use your phone's built-in camera to take pictures and record video.

From a Home screen, touch  **Applications > Camera**.

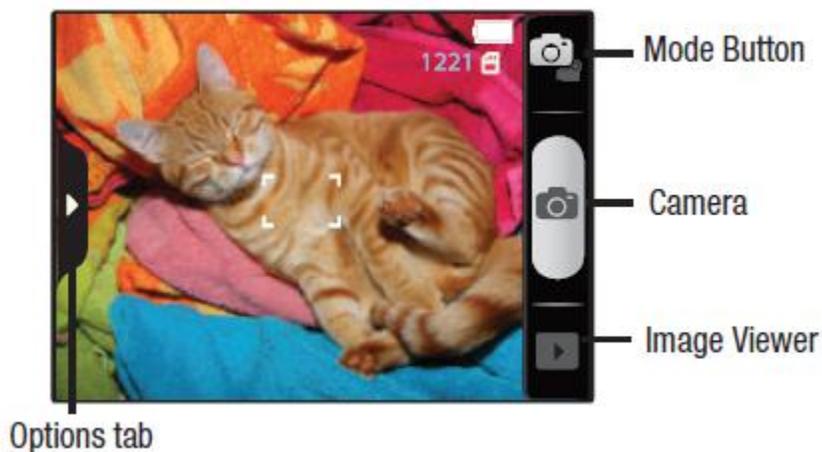

**IMPORTANT:** Do not take photos of people without their permission. Do not take photos in places where cameras are not allowed. Do not take photos in places where you may interfere with another person's privacy.

## Taking Pictures

1. From a Home screen, touch  **Applications > Camera.**
2. Using the display as a viewfinder, compose your picture by aiming the lens at the subject.
  - Touch the screen to focus on an area.
  - Press the volume key to zoom in or out.
3. To take the picture, touch the Camera button.
4. After taking a picture, touch the Image Viewer to view the picture. While viewing the picture, use these options:
  - Touch the zoom icons to zoom incrementally, or double tap the picture to zoom all the way in or out.
  - Touch Delete to erase the picture.
  - Touch Share to send the picture via AllShare, Bluetooth®, Facebook®, email, Gmail™, messaging, MySpace™, Picasa™ or Yahoo!® mail.
  - Touch Set as to assign the picture as a contact icon or as wallpaper.
  - Touch Back to return to the camera to take more pictures.

## Camera Options

While in camera mode, touch the **Options** tab to configure the following options:

- **Shooting mode** – Choose an automatic shooting mode.
  - **Single shot** - Take a single photo.
  - **Smile shot** - Touch the camera button to automatically focus on the subject's face and take the picture.
  - **Panorama shot** - Touch the camera button to take a picture then use the on-screen guideline to move the viewfinder and take the next seven shots automatically.
  - **Beauty** - Adjust the contrast to smooth facial features.
  - **Continuous** - Touch and hold the camera button to take nine consecutive pictures.
  - **Vintage** - Add a vintage effect to photos.
  - **Add me** - Take one picture, then use the on-screen guideline to compose and take a second picture, combining them into one photo.
  - **Cartoon** - Apply a cartoon effect to pictures.

- **Action shot** - Detect action and automatically take multiple pictures to create a panorama.
- **Flash** – Choose Off, On or Auto Flash.
- **Exposure value** – Choose a value to set the brightness of the picture.
- Settings > Camera Icon
  - **Outdoor visibility** - Enable this feature to enhance screen visibility.
  - **Focus mode** - Choose between auto focus, macro and face detection.
  - **Scene mode** - Choose a mode to match conditions.
  - **Timer** - Set a delay before taking a picture (2, 5 or 10 seconds).
  - **Resolution** - Choose a pixel size for the image.
  - **White balance** - Choose a setting for the light source.
  - **Effects** - Apply an effect to pictures.
  - **ISO** - Choose a setting for image sensitivity.
  - **Metering** - Select a method for measuring light.
  - **Anti-Shake** - Enable Anti-Shake to minimize camera movement.
  - **Auto contrast** - Allow automatic light/dark adjustment.
  - **Blink detection** - Detect a subject's blinks and adjust the timing of the picture capture to avoid closed eyes in the shot.
  - **Image quality** - Choose a quality setting for photos.
  - **Adjust** - Set contrast, saturation and sharpness.
- Settings > Wrench Icon
  - **Guidelines** - Enable or disable an on-screen grid to aid in photo composition.
  - **Review** - Enable or disable the instant review feature to display images immediately after capture.
  - **GPS** - Save location information with a photo.
  - **Shutter sound** - Select a tone to play when the camera's shutter opens and closes.
  - **Reset** - Restore the camera's default settings.

## Camcorder

Use your phone's built-in camcorder to record high-definition video in 720p resolution.

From a Home screen, touch  **Applications > Camera > [Mode Button]**.



**IMPORTANT:** Do not record videos of people without their permission. Do not record videos in places where cameras are not allowed. Do not record videos in places where you may interfere with another person's privacy.

## Capturing Video

1. From a Home screen, touch Applications > Camera > Camcorder.
2. Using the display as a viewfinder, compose your shot by aiming the lens at the subject.
  - Press the **Volume Key** to zoom in or out.
3. To start recording, touch the **Record** button. During recording, the button changes to Pause; touch Pause to temporarily stop recording. Touch Record again to resume.
4. To stop recording, touch the **Stop** button.
5. After recording, touch **Image Viewer** to view the video.

While viewing the video, use these options:

- Double tap the video to zoom all the way in or out.
- Touch Share to send the video via AllShare, Bluetooth®, Facebook®, email, Gmail™, messaging, MySpace™, Picasa™ or Yahoo!® mail.
- Touch Play to review the video.
- Touch Delete to erase the video.
- Touch Back to return to the camcorder to record more video.

## Camcorder Options

While in camcorder mode, touch the **Options** tab to configure the following options:

- **Recording mode** - Choose a recording mode from:
  - **Normal** - Record a video of any length.
  - **Limit for MMS** - Record a video up to 450K in size, suitable for sending in a video message.
- **Flash** – Choose Off or On.
- **Exposure value** – Choose a value to set the brightness.
- Settings > Camcorder icon
  - **Outdoor visibility** - Enable this feature to enhance screen visibility.
  - **Timer** - Set a delay before starting to record.
  - **Resolution** - Choose a pixel size for the recording.
  - **White balance**-- Choose a setting for the light source.
  - **Effects** - Apply an effect to videos.
  - **Video quality** - Choose a quality setting for videos.
  - **Adjust** - Set contrast, saturation and sharpness.
- Settings > Wrench icon
  - **Guidelines** - Enable or disable an on-screen grid to aid in video composition.
  - **Audio recording** - Enable this feature to record sound with the video.
  - **Review** - Enable or disable the instant review feature to display videos immediately after capture.
  - **Reset** - Restore the camcorder's default settings.

## Video Player

Your phone's 4" 800x400 Super AMOLED™ screen plays HD videos up to 720p, supporting H.263, H.264, MPEG4, 3GP, 3G2 (v9) and Xvid formats. Your phone is also DivX Certified® to play DivX® up to HD 720p, including premium content.

Use the video player to view and manage videos stored on an installed memory card or shop for new videos.

1. From a Home screen, touch  **Applications > Video Player**.
2. By default, videos display by name. While viewing the list of videos, touch  **Menu** for these options:
  - **Remove** - Touch videos to select them for deletion or touch Select all to delete all videos.
  - **List by** - Display the list of videos by name (default) or type.
3. Touch a video to play it. While playing a video, touch the screen to display or hide on-screen Forward, Pause or Backward Playback controls.

4. While playing a video touch  Menu for these options:
  - **Share video** - Send the video via AllShare, Bluetooth®, messaging, YouTube™, Gmail™ Yahoo!® mail.
  - **Add bookmark** - Place a marker in the video to view later.
  - **Bookmarks** - Display markers from the video.
  - **Via Bluetooth** - Send the video via Bluetooth.
  - **Details** - Show the video's file name, format, resolution, file size, and data and time.
  - **Settings** - Choose Repeat, Brightness, Color tone and Outdoor visibility settings.

## Gallery

Your phone's 4" 800x400 Super AMOLED™ screen provides high resolution display of:

- Pictures including JPEG, PNG, GIF, A-GIF, WBMP and BMP formats.
- HD videos up to 720p, including H.263, H.264, MPEG4, 3GP, 3G2 (v9) and, Xvid formats. Your phone is also DivX Certified® to play DivX® up to HD 720p, including premium content.

Use Gallery to view, capture and manage pictures and videos.

**Note:** You must have an optional memory card installed in your phone to take pictures or capture video.

From a Home screen, touch  **Applications > Gallery.**

## Viewing Videos

1. From a Home screen, touch  **Applications > Gallery.**
2. Touch a category and then touch a video to play it.
3. While viewing a video, touch  Menu for these options:
  - Via Phone / Bluetooth – Send the video via a phone/Bluetooth connection.
  - Details - Show the video's file name, format, resolution, file size, and data and time.

## Viewing Pictures

1. From a Home screen, touch  **Applications > Gallery.**

2. Touch a category and then touch a picture to view it.
3. While viewing a picture, tap on the screen or touch  **Menu** for these options:
  - **Share** - Share the selected picture via MySpace™, Facebook®, AllShare, Bluetooth®, messaging, Picasa™, Gmail™ or Yahoo!® mail.
  - **Delete** - Erase the picture
  - **More** -
    - **Details** - Display information about the picture.
    - **Set as** - Assign the picture as a contact icon or as wallpaper.
    - **Crop** - Drag the edges of the crop tool to select an area of the picture. Then, touch Save to save just the selected area, removing the rest of the picture.
    - **Rotate left** - Change the orientation of the picture.
    - **Rotate right** - Change the orientation of the picture.

## Sharing Pictures and Video

Share pictures and videos via email, AllShare, Bluetooth®, messaging, Picasa™ or Gmail™.

1. From a Home screen, touch  **Applications > Gallery**.
2. Touch a category to display thumbnails, and then select items for sharing.
  - To select an entire category, touch  **Menu** while viewing categories. Then, touch the category to select all pictures in the category.
  - To select multiple pictures or videos from a category, touch  **Menu** while viewing the thumbnails. Touch thumbnails to mark them for sharing, and then touch Share.
3. Touch MySpace™, Facebook®, AllShare, Bluetooth®, messaging, Picasa™, YouTube, Gmail™ or Yahoo!® mail.

## Managing Connections

Your phone includes features to connect to the Internet and to other devices via Wi-Fi®, Bluetooth®, VPN and dial-up networking.

### Wi-Fi®

Wi-Fi is a wireless networking technology that provides access to local area networks. Use your phone's Wi-Fi features to:

- Access the Internet for browsing, or to send and receive email.
- Access your corporate network.
- Use hotspots provided by hotels or airports while traveling.

Wi-Fi communication requires access to an existing Wireless Access Point (WAP). WAPs can be Open (unsecured, as with most hot spots) or Secured (requiring you to provide login credentials).

Your phone supports the 802.11 b/g/n Wi-Fi protocol.

### ***Configure your phone's Wi-Fi settings***

Set up and manage wireless access points.

1. From a Home screen, touch  **Menu > Settings > Wireless & networks > Wi-Fi settings.**
2. Touch **Settings** to configure.
  - Wi-Fi – Touch to turn Wi-Fi on or off. When on, a check displays in the checkbox.
  - Network notification – When enabled, this feature notifies you when an open network is available.
  - Add Wi-Fi network – Manually add a new Wi-Fi connection.

### ***Turning Wi-Fi On or Off***

When you turn Wi-Fi service on, your phone automatically searches for available, in-range Wireless Access Points.

#### **Turning Wi-Fi On**

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn it on.

#### **Turning Wi-Fi Off**

1. From the Home screen, sweep your finger downward to display the Notification Panel.
2. Touch **Wi-Fi** to turn it off.

