

What You Should Know Before You Upgrade

This Upgrade Tool is **Not Compatible** with any Other Product.

Please **Remove Your MicroSD Memory Card** before you start the update process.

During the upgrade process the following data will be **Backed Up and Restored**:

- Alarms
- Browser Bookmarks
- Calendar Events
- Contacts
- Email Accounts
- Gallery
- Google Market Apps
- Messages
- Music, Playlists, Ringtones

What you will need to setup after you upgrade the device:

- Camera and camcorder settings
- Widgets, short-cut, wallpaper and any other personalization

Update Process Overview

1. Obtain the Software Upgrade Tool
2. Launching of Setup icon to install SamsungSimpleDL on your Desktop
3. Downloading of the Software Update (EE03) to the phone
4. Verification of the phone's software version

Step One: Obtain Software Upgrade Tool

To obtain a copy of the SW Upgrade Tool, click on the download button below.




<http://budurl.com/csgem22>

Save the file to a specified location, recommend desktop for easy access.

Step Two: Launching of Setup icon to install SamsungSimpleDL on your Desktop

1. Close all open programs
2. Click on **Setup** icon to execute the InstallShield Wizard.

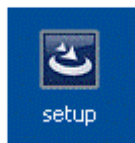

3. The InstallShield Wizard will install SamsungSimpleDL on your computer. Select **Next>** to continue.



4. Click **Install** to begin the installation.



5. The InstallShield Wizard is now installing SamsungSimpleDL.



6. InstallShield Wizard has successfully installed the SamsungSimpleDL. Click **Finish**. If directed to Restart computer, select **Yes, I want to restart my computer now** and Select **Finish**.



7. Please Notice the new **SWUpgrade** icon that has just been installed on your Desktop.

Step Three: Downloading Of The Software Upgrade (EE03) To The Phone

1. Click on the **SWUpgrade** icon on your Desktop



2. After reading the End User License Agreement, check the button “I **accept the terms...**” and then select **Next**.



3. A warning will prompt you to synchronize the data on your handset and to charge your battery fully before proceeding with the software upgrade. The upgrade requires a minimum of 20MB of available memory, please see section **Requirements For Using Software Upgrade Tool** for instructions to check available memory. Select **Next** after these steps have been performed.



4. Take the back cover from your phone off and remove battery. Put the battery back in the phone and put the cover back on. Select **Next** on the Software Upgrade tool.



- Put the phone in Download Mode by simultaneously pressing and holding the Send and Power keys on your handset. Hold the keys until the following screen appears. Select **Next**.



- Attach the USB cable from the computer to the handset.



- The device drivers are now installed. Unplug the USB cable from the computer and the handset. Select **Next**.



8. Take the back cover from the phone off and remove battery. Put the battery back in the phone and put the cover back on. Select **Next** on the Software Upgrade tool.



9. Put the phone in Download Mode by simultaneously pressing and holding the Send and Power keys on your handset. Hold the keys until the following screen appears. Select **Next**.




10. Attach the USB cable from the computer to the handset again. To ensure that the drivers were detected, a message on the bottom left hand corner shows **Ready**. On the bottom right hand corner, it will show **COM Connected**. Select **Next**.



11. Press **Start Software Download** button to start the upgrade process.



12. **Please Do Not Disconnect The USB Cable From The Computer Or The Handset. The Handset May Be Inoperable If Disconnected During Upgrade Process.**

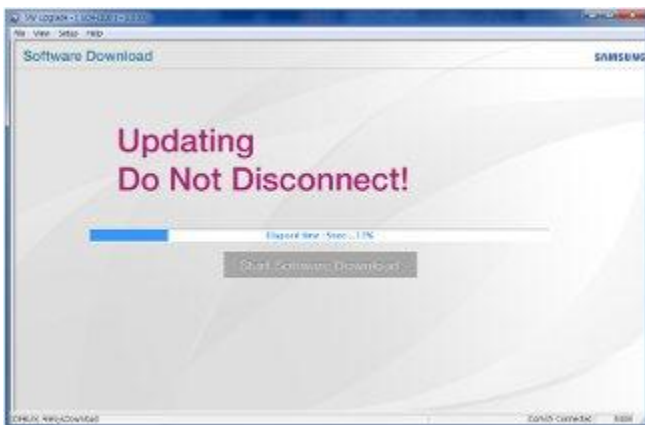



13. A popup message will show that the software upgrade is complete. Select **OK**.



14. After software upgrade, the phone will restart.
15. Unplug the USB cable from the computer and the handset.
16. Reinstall the MicroSD Memory Card.

Step Four: Verifying The Generic CDMA SCH-I100 (Gem) Software Version

After completion of the EE03 upgrade, please verify the software on the phone is accurate.

1. Press the **Home** Key 
2. Press the **Menu** Key 
3. Tap **Settings**
4. Tap **About Phone**
5. The software version will be listed under the **Baseband version** heading and will be in the format of **S:i100.06 K.EE03**