

R871 Mobile Hotspot

User Guide



Table of Contents

Introduction.....	1
Before You Begin	1
Compatible Operating Systems (OS).....	2
Package Contents.....	2
SSID and Security Key	3
Additional Information	3
Get Started.....	4
Parts and Functions	4
Home Screen	5
Data Transfer Volume and Transfer Speed	6
SIM Card	7
Battery Use	10
Turn Your Device On and Off	13
Connect with Wi-Fi (WLAN)	14
Wi-Fi (WLAN) Overview.....	14
Activate Wi-Fi (WLAN) Function	14
Connect Windows PCs with Wi-Fi	15
Connect Mac Computers with Wi-Fi	15
Connect iOS devices (iPhone/iPod Touch/iPad)	18
Connect an Android™ Device.....	19
Hotspot Settings.....	20
Launch the Web UI page	20
Home.....	21
Connected Devices	22
Settings	24
About.....	43
Support Tab	44
Appendix	45
Troubleshooting	45
Specifications	48
Warranty and Service.....	50
Customer Service.....	51

Trademarks and Copyrights.....	51
Safety and Notices	52
Safety Precautions	52
Important Notice	52
Safety and Hazards	52
Proper Battery Use and Disposal	53
FCC Compliance	53
RF Exposure Information and Specific Absorption Rate (SAR) Information	54
Index.....	55

Introduction

The following topics describe the basics of using this guide and your new mobile broadband device.

Before You Begin

Thank you for purchasing your new R871 Mobile Hotspot!

The following topics explain how best to use this guide to get the most out of your mobile broadband device.

Before Using Your Device

Read [Safety and Notices](#) thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

Guide Usage Notes

Note that most descriptions in this guide are based on your device's default settings at the time of purchase.

Screenshots and Key Labels

Screenshots and Key labels are provided for reference only. Actual windows, menus, etc. may differ in appearance.

Other Notations

In the user guide, the mobile broadband device may be referred to either as "mobile broadband device," "hotspot," "device," or "R871."

Compatible Operating Systems (OS)

The table below outlines the compatible operating systems (OS) for your device. Use outside these environments may affect performance. Additional factors (hardware, connected peripherals, installed applications, etc.) may also affect performance.

- For computer support, OS version upgrade information, etc., see the corresponding manufacturer's product support documentation.
- The information for operating system (compatible OS) listed below is the current information for your device sold as of Feb.2016. Check [Compatible Operating Systems](#) for the latest information in regards to operating environment.

Item	Description
Compatible operating systems (OS)	Windows 7, 8, 10 MacOS 10.5 or later Android 2.1 or later
Compatible browsers	Chrome 36.0 or later Internet Explorer 8.0 or later Firefox 3.1 or later Safari 5.0 or later

Package Contents

See below for details on everything you will find in the box for your R871.

- R871 Mobile Hotspot (Battery and battery cover)
- AC Charger with micro USB
- Get Started Guide (English version and/or Spanish version)

SSID and Security Key

Before connecting Wi-Fi devices to your R871, you will need to confirm the WiFi Name and WiFi Password.

- Once your device is completely powered on, shortly press the menu button (power button) 1 time for the WiFi Name and twice to obtain WiFi Password specific to your device (Note: when the device display is off, the first press wakes up the display.)
 - ❖ You will see the WiFi Name and WiFi Password.

Additional Information

The following list describes additional information useful to know before you begin using your R871.

- Your mobile broadband device accommodates software updates. Always use the latest software.
- Note that connection speeds may drop or connections may be disabled depending on line traffic or connection environments.

Get Started


The following topics give you all the information you need to set up your device and wireless service the first time.


Parts and Functions


Learn your device's primary parts and functions.

Device Layout

The following illustration outlines your device's primary external features and buttons.

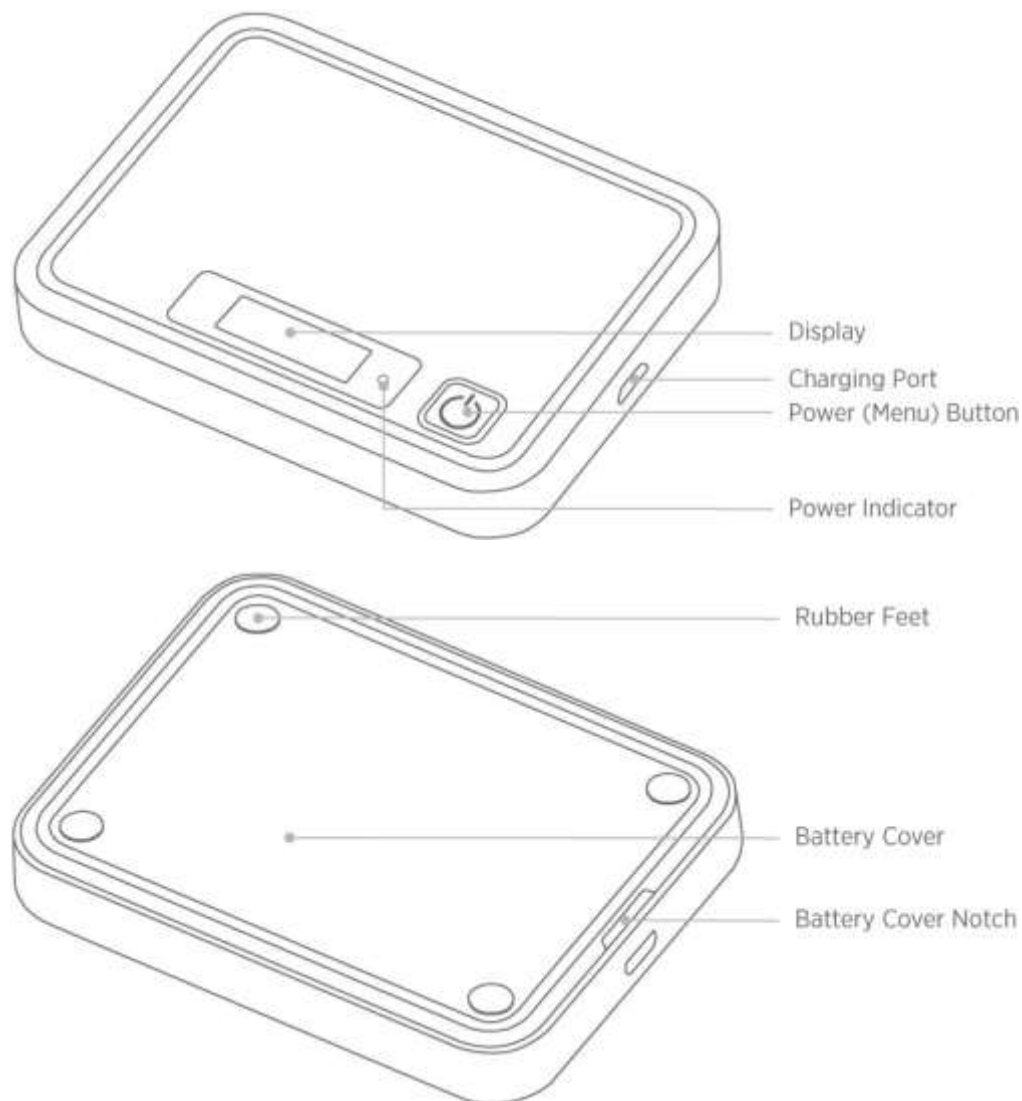

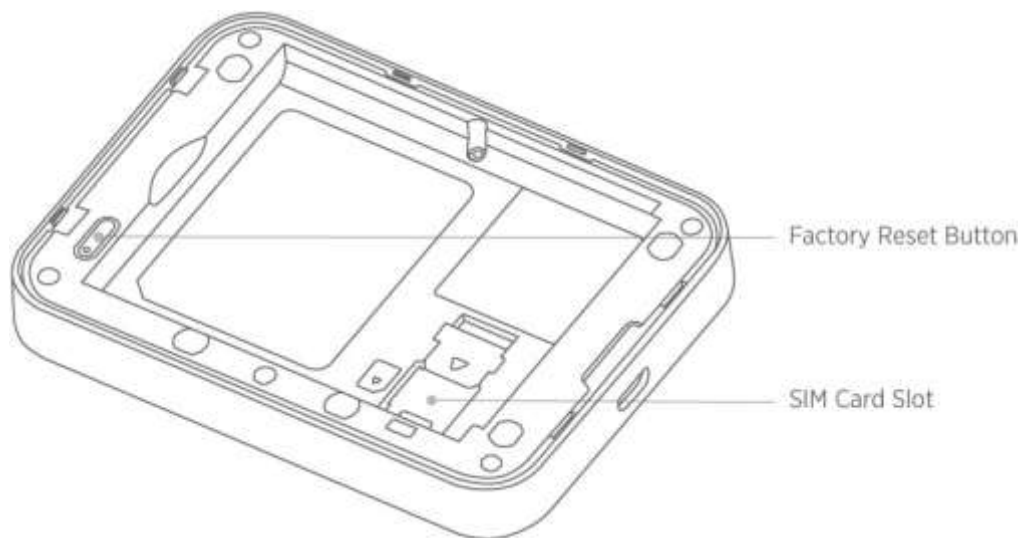

Part	Description
Display	View device status and information
SIM card slot	Install the SIM card.
Charging Port	Connect the micro USB cable for charging.
Battery cover	Remove the battery cover to remove or insert the battery or SIM card.
Factory Reset Button	Long press to reset your device to its default settings.
Power (Menu) button 	Long press to toggle power on or off. Short press to navigate device information

Home Screen

The following topics describe the details of your device's display layout, icons, data usage and information.

Home Screen Layout

Explore your device's home screen layout.














Part	Description
------	-------------

Part	Description
Status bar	Displays status indicators including connection status, signal strength, devices connected, battery level, and more.

Status Bar Icons

The home screen's status bar may feature the following icons, depending on current status.

Icon	Description
	Mobile networks connected
	Service signal strength. The more bars, the better service signal received
	Out of service area
	Appears when roaming
	The number of connected WLAN devices
	Battery full
	Battery low
	No battery. Battery icon blinking (charging required)
	Invalid SIM
	No SIM
	SIM Lock

Data Transfer Volume and Transfer Speed

Wireless Mode	Maximum Downlink Speed	Typical Downlink Speed
4G LTE	150 Mbps	50 Mbps

Note: Actual speeds depend on several factors, including network conditions.

SIM Card

The SIM card is an IC card containing your device's phone number and other customer information.

Handling a SIM Card


Keep the following in mind when handling a SIM card.

- Customer is responsible for any damage caused by inserting the SIM card in another-brand IC card reader, etc. The company is not responsible in such case.
- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage the SIM card.
- See instructions included with the SIM card for handling.
- The SIM card is the property of the company.
- The SIM card is replaceable (at cost) in case of loss/damage.
- Return the SIM card to the company when cancelling subscription.
- Returned SIM cards are recycled for environmental purposes.
- Note that SIM card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on the SIM card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your SIM card or device (SIM card inserted) is lost or stolen. For details, contact Customer Service.
- Always power off the mobile broadband device before inserting or removing the SIM card.


Installing / removing a SIM Card

Follow these instructions to insert or remove a SIM card. Remember to power off your device before inserting or removing a SIM card.


1. Press and hold the **Power** key  to turn off the device before inserting or removing the SIM card.

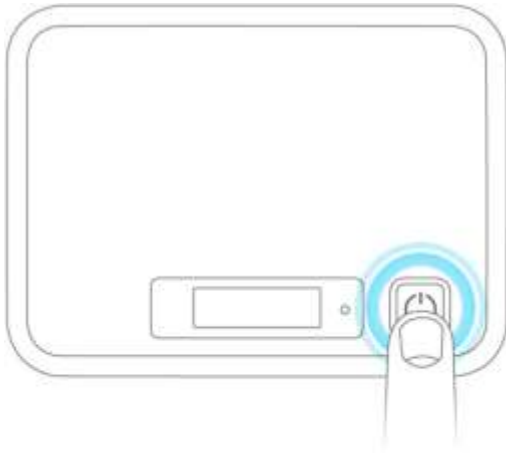


2. Remove the battery cover.

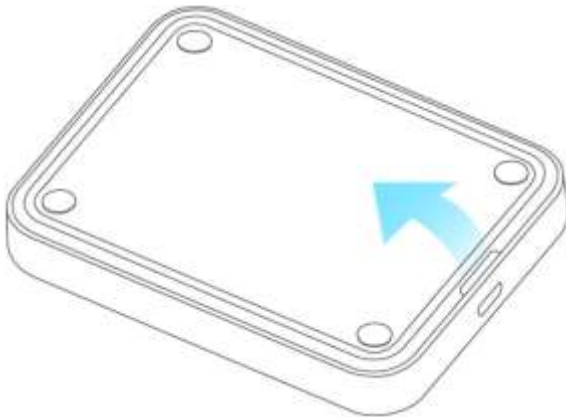


3. Open the SIM card cover.

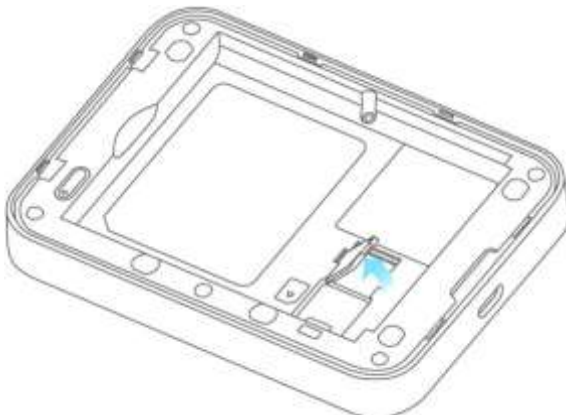


4. Insert the SIM card gently with gold IC chip facing downward

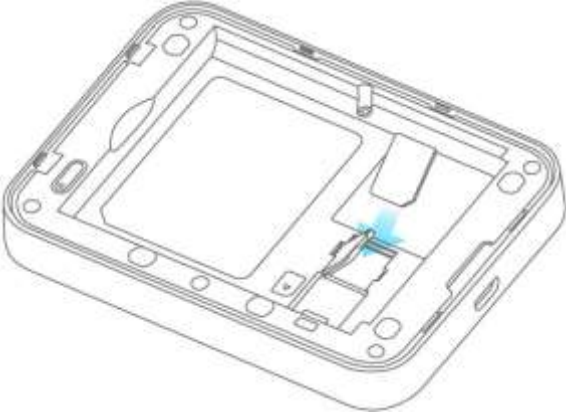

5. Remove the SIM card by gently pressing down and sliding outwards.

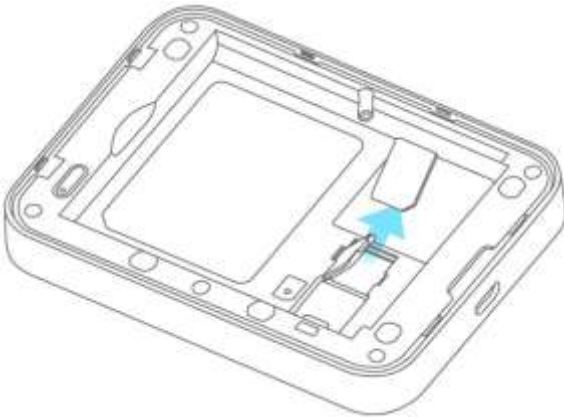

6. Close the SIM card cover and insert the battery.

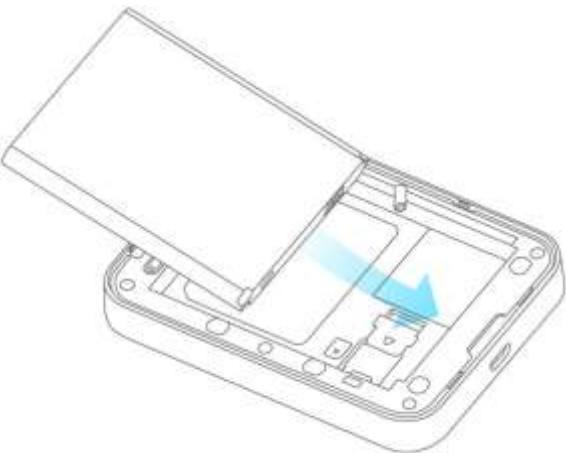

- Align the contacts of the battery with the contacts in the device.

7. Attach the battery cover.

Battery Use

The following topics explain how to insert and remove your device's battery.

Battery Cautions

Storage: Avoid storing or leaving the battery with no charge remaining. Saved information and settings may become lost or changed, or battery may become unusable. Charge once every six months before storing or leaving unused for a long period.

Bulges: Depending on use, bulges may appear near end of battery life. This does not affect safety.


Replacing the Battery: The battery is a consumable item. It needs to be replaced if operating time shortens noticeably. Purchase a new battery.

Cleaning: Clean soiled terminals between battery and device with a clean, dry cotton swab. Soiled terminals can result in a poor connection and prevent charging, etc.


Inserting / Removing the Battery

Follow these instructions to insert your device's battery safely and properly.

1. Press and hold the **Power** key  to turn off the device before inserting or removing the battery.

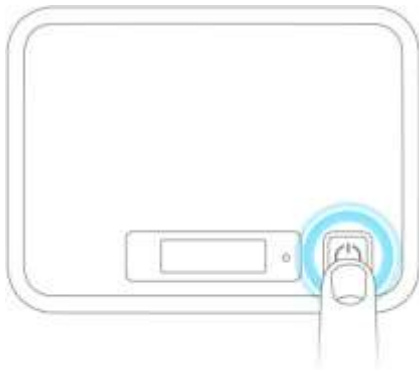

2. Remove the battery cover.
3. Remove the battery / Insert the battery.

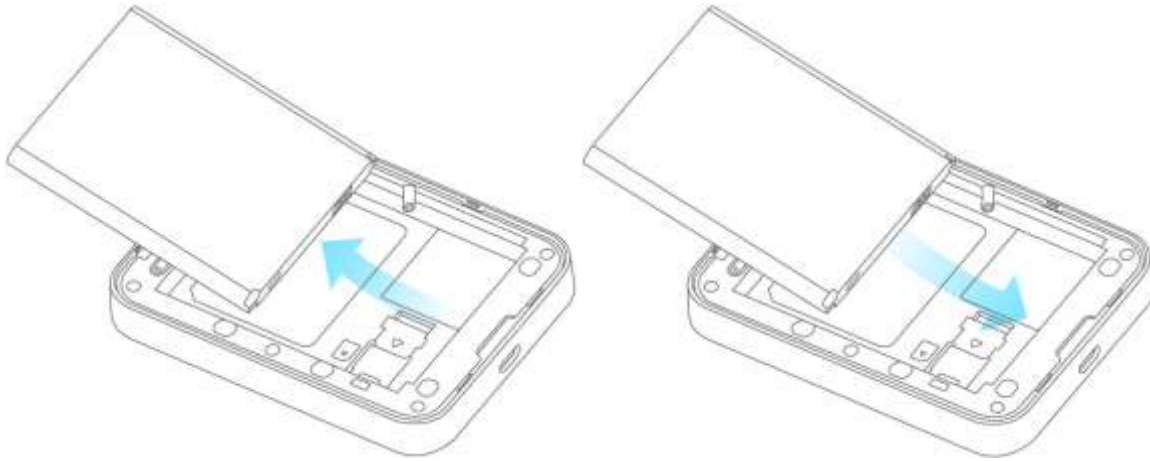

4. Replace the battery cover.

Charge the Battery

! Follow these instructions to charge your device's battery using the included AC adapter. **Battery Charging Cautions**

Charging Conditions: Under low temperatures charging performance decreases. Charge in temperatures between 5°C ~ 35°C. Do not charge in places where there is high humidity. USB charging may be unavailable depending on Wi-Fi router temperature.


Use Supplied Accessories: Always use the supplied AC adapter.

Precaution for Extended Use: Your device may become hot when used for a long time or while charging, especially in high temperatures. Prolonged contact with skin may cause low-temperature burn injuries.

The R871 and AC Adapter Becoming Warm or Hot: Your device and the AC adapter may become warm while charging. This is not a malfunction. However, stop using them immediately if they become extremely hot; this could indicate a malfunction.

Charge Using the AC Adapter


Use the supplied AC adapter.

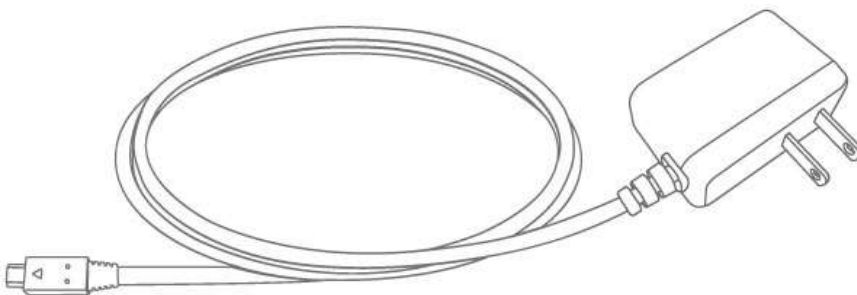

1. Plug the AC adapter into an electrical outlet.

- ❖ The indicator light on the power button illuminates red when charging starts. The light turns green when the battery is fully charged. Fully charging a battery may take up to three hours.

2. After charging, disconnect the device from the charger.

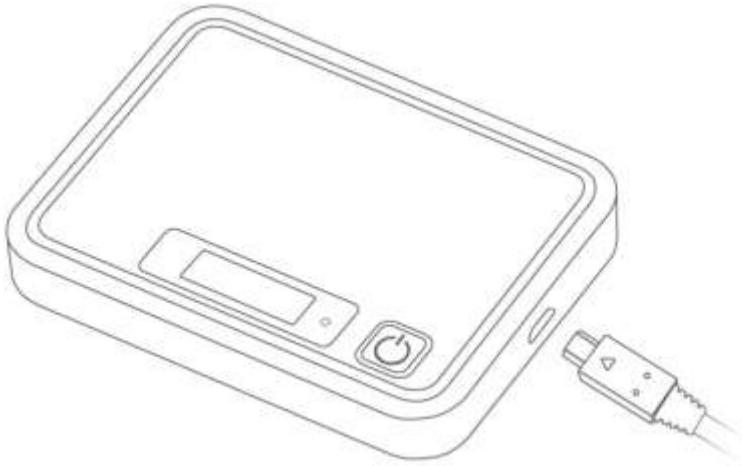


- Unplug the AC adapter from the outlet, and remove the micro USB connector from the device.

Turn Your Device On and Off

The instructions below explain how to turn your device on and off, or to restart your device if it cannot be powered on and off using the **Power** button .

Turn Your Device On

- Press and hold the **Power** button  until the device displays "Welcome".

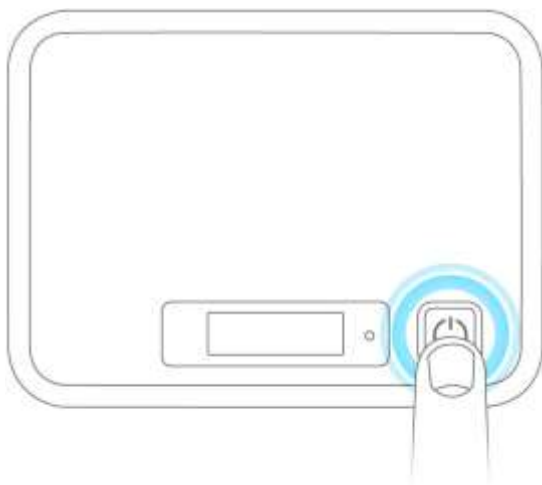

Turn Your Device Off

Press and hold the **Power** button  until the device displays "Goodbye".

Restart Your Device

If your device will not turn on or off using the Power button, remove and re-insert the battery (see the section "[Inserting / Removing the Battery](#)"), then press and hold the power button again.

Note: Restarting your device does not reset the device settings.

Connect with Wi-Fi (WLAN)

The following topics outline basic features and operations of your device's Wi-Fi (WLAN) connections, including connecting with various OS and device types.

Wi-Fi (WLAN) Overview

Below are some basics of your device's Wi-Fi (WLAN) function.

Wi-Fi (WLAN) Information

- **Advanced Settings:** Change your device's Wi-Fi (WLAN) settings as required. See [Wi-Fi Basic Settings](#)
- **Simultaneous Connection:** Use your device to connect up to 10 Wi-Fi devices simultaneously.
- **Automatic Updates for Optimizing Wi-Fi Connection:** When connected by Wi-Fi, connection optimizing settings may be automatically received and updated.

Wi-Fi (WLAN) Usage Cautions

For added security, it is recommended that you change the default Wi-Fi network name (SSID) and Wi-Fi password after setting up your device.

Wi-Fi (WLAN) Overview

- Your device supports IEEE 802.11 b/g/n standards. Connect Wi-Fi devices (PC, game console, etc.) via Wi-Fi for wireless data transfers.

Activate Wi-Fi (WLAN) Function

Follow the instructions below to activate your device's Wi-Fi function and connect to the Internet via an available 4G LTE connection. Use the Web UI to select a network.



Press and hold the **Power** button  until the device displays "Welcome".

- Your device's Wi-Fi function activates and automatically connects to the Internet.

Connect Windows PCs with Wi-Fi

The following topics describe how to connect your device with various versions of Windows PCs via Wi-Fi.


Connect Windows PCs to your device with Wi-Fi.

1. Press and hold the **Power** button  to power on your R871.
 - ❖ Your device's Wi-Fi function activates and automatically connects to the Internet.
2. Activate your PC's Wi-Fi function.
 - The operations depicted are based on Window 10.
 - For other Window versions, consult your PC's operation manual for details on activating Wi-Fi.
3. On your PC, move the cursor to the upper-right or lower-right corner and select WLAN icon . Select your device's Wi-Fi Name (SSID) from the list, and click **Connect**.
4. Enter the Wi-Fi password and then click **Next**.
 - ❖ The PC connects to your device. The connected status icon on your device will show an additional device has been connected.

Connect Mac Computers with Wi-Fi


Follow the instructions below to connect a Mac computer to your device via Wi-Fi.

Note: The operations depicted are based on Mac OS X 10.10.5

1. Press and hold the **Power** button  to power on your R871.
 - ❖ Your device's Wi-Fi function activates and automatically connects to the Internet.
2. On your Mac, in the Apple menu, click **System Preferences... > Network**.



3. Click **Wi-Fi** > **Turn Wi-Fi On**.

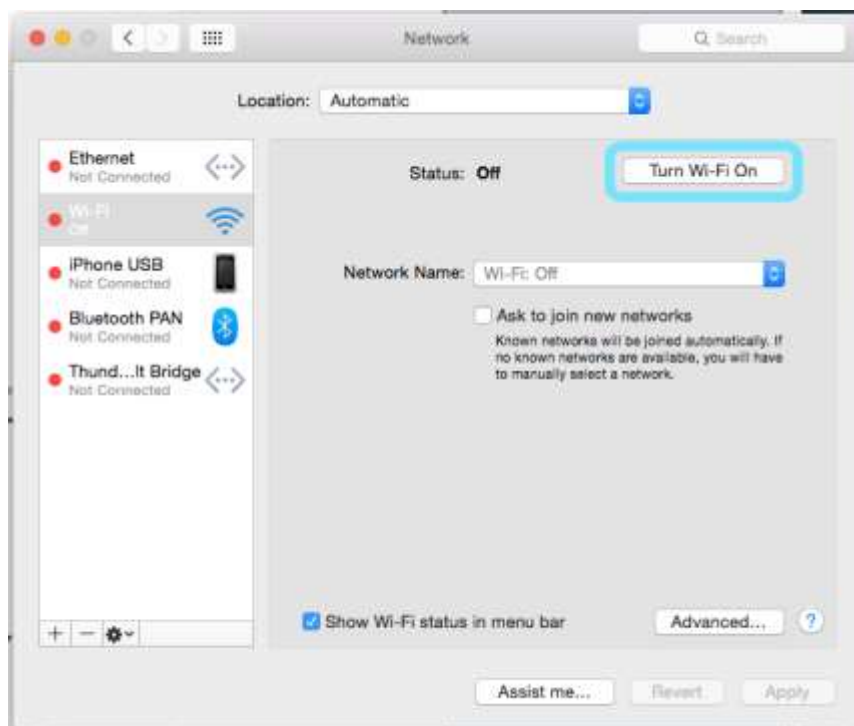

❖ Your computer's Wi-Fi function activates.


4. Select your R871's Wi-Fi Name (SSID) from the Network Name pull-down list.
5. Enter the Wi-Fi password in the Password field, check **Remember this network**, and then click **Join**.

❖ The computer connects to your device. The connected status icon on your device will show an additional device has been connected.

Connect iOS devices (iPhone/iPod Touch/iPad)

The following topics outline how to connect your iPhone, iPod Touch, or iPad to your device via Wi-Fi.


Note: The operations below are based on your iPhone or iPod Touch Wi-Fi security set to [\[xxx\]](#).

1. Press and hold the **Power** button  to power on your R871..
 - ❖ Your device's Wi-Fi function activates and automatically connects to the Internet.
2. Select **Settings > Wi-Fi**.
3. Select **Turn on Wi-Fi**.
 - ❖ The iPhone or iPod Touch's Wi-Fi function activates.
4. In the Choose a Network list, tap your R871's Wi-Fi Name (SSID).
5. Enter the Wi-Fi password and then tap **Join**.
 - ❖ The iPhone or iPod Touch connects to your device. The connected status icon on your device will show an additional device has been connected.

Connect an Android™ Device

You can share your device's connection with compatible Android devices, such as wireless phones, tablets, and Chromebook computers.

Note: The operations below are based on generic Android devices with Wi-Fi security set to [xxx]. Operation may vary depending on Android device type. See your Android device user guide for details.

1. Press and hold the **Power** button  to power on your R871.
 - ❖ Your device's Wi-Fi function activates and automatically connects to the Internet.
2. On your Android device, from home, select **Menu > Settings**.
3. Tap or click **Wi-Fi**.
 - ❖ The Wi-Fi settings menu appears.
4. Tap or click the Wi-Fi slider to turn Wi-Fi on.
 - ❖ Wi-Fi is enabled on the Android device.
5. Tap or click your R871's Wi-Fi Name (SSID) from the list, and tap **Connect**
6. Enter the Wi-Fi password and then tap or click **Connect**.
 - ❖ The Android device connects to your mobile broadband device. The connected status icon on your device will show an additional device has been connected.

Hotspot Settings

The following topics provide an overview of items you can change using the device **settings** menu accessed through the Web UI.

Launch the Web UI page

Use the device Web UI in a browser to check or change your R871 settings from a device connected via Wi-Fi.

1. Connect your R871 to an external device via a Wi-Fi connection.
2. Launch a browser and access the Web UI via <http://myhotspot> or <http://192.168.128.1>
3. The Web UI launches and displays the main window.
4. Log In with the Admin Password.


Admin Log in

Accessing other menus from the home screen requires admin log in.


Click “**Log in**” on the upper right corner of the main screen to log in. (Clicking other menus on the main screen will prompt the log in page as well.)

Enter the password and click the “Login” button.

The default password is “**password**”. It's recommended to change the password for your security.

 **Incorrect passwords are tried 5th times, access will be suspended while 3 minutes.**

- From the device LCD, You can view Admin Password

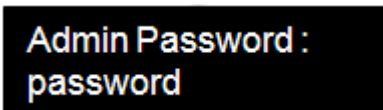


Admin Password :
password

Home

Check current status of network connection and data usage on the Home page.

- From the Web UI, click the **Home** tab.



Welcome to your R871

English

Log in

Home

Connected Devices

Settings

About

Support

Connection

Network Status

Disconnected

Network

No Svc

Time Connected

Data Used

0 Byte

Connect

Main Wi-Fi

Franklin_Dell

Guest Wi-Fi

No Connected Device

Data Usage

0 byte of 10 GB Used

100% Remaining

Reset

You can reset usage or change usage meter from [settings page](#).

© 2016 C Spire. All rights reserved.

Connection

The Connection Status display Network Status, LTE Status, Connection time, current Data Used and Connect control button. Also Wi-Fi connected devices name.

Connected Devices

The Connected Devices tab lets you confirm the names and MAC addresses of devices currently connected to your device and set access permissions.

Check the Connected Devices

- From the Web UI, click **Connected Devices > Connected** to display the list of connected devices.



From the device LCD, You can view Wi-Fi enabled devices currently connected to your Hotspot on the display




Edit the Connected Device

- Click the Edit button. A page opens allowing you to edit a Main Wi-Fi Devices.
- You can change a devices name on the Main Wi-Fi Devices.
- To save, click the OK button

Set Access Permissions

Control user's ability to access main or guest Wi-Fi. Changing this status will immediately update the status of devices listed ability to access Wi-Fi from this device, even if they have the password.

- From the Web UI, click **Connected Devices > Access Permissions**.

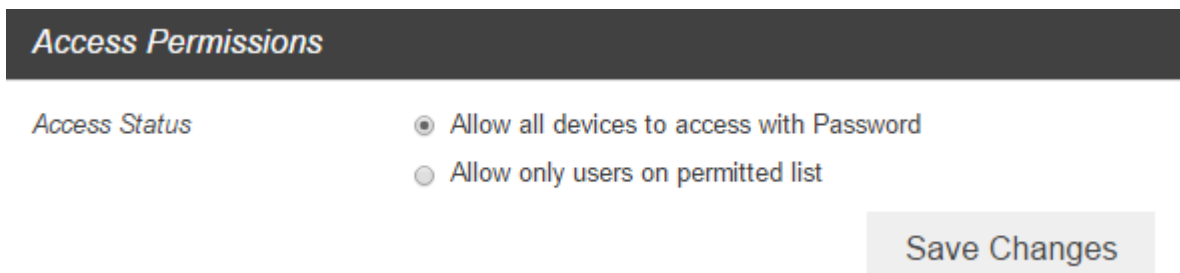

2. Select an access status and then click **Save Changes**.

Add Permitted Devices

The Access Permissions menu allows you to restrict access only to specific users, instead of anyone who enters the password. To restrict access in this manner, you need to add permitted users from the menu.

3. From the Access Permissions menu, select **Allow only users on Permitted list**.

❖ The Add Devices option will appear onscreen.

The screenshot shows the 'Access Permissions' menu. Under 'Access Status', the option 'Allow only users on permitted list' is selected with a radio button. Below this is a table with two columns: 'Permitted Device List' and 'MAC Address'. The table is currently empty, with the text 'No Permitted Device' centered in the first row. At the bottom of the menu, there are two buttons: 'Add' and 'Save Changes'.

Permitted Device List	MAC Address
No Permitted Device	

4. Click > next to **Add Devices** to open the Add Devices menu, and then click **Add More**.

5. Enter a Friendly Name (optional) and the MAC address of the permitted device.

- A sample MAC address might be 00:1D:0F:10:2D:D9.

The screenshot shows the 'Access Permissions' menu. Under 'Access Status', the option 'Allow only users on permitted list' is selected with a radio button. Below this is a table with two columns: 'Permitted Device List' and 'MAC Address'. The table has one row with the text 'Test Sample' in the first column and '00:1D:0F:10:2D:D9' in the second column. To the right of the table, there are two buttons: 'OK' and 'Cancel'. At the bottom of the menu, there are two buttons: 'Add' and 'Save Changes'.

Permitted Device List	MAC Address
Test Sample	00:1D:0F:10:2D:D9

6. Click **Add More** to add more permitted devices.

7. When you are finished adding permitted devices, click **Save Changes**.


❖ Access to your device will be restricted to the devices in your list.

Settings

Set your device options, including Wi-Fi, Mobile Network, Device and Advance Router.

Wi-Fi Basic Settings

Set the basic Wi-Fi settings for your device.

 *These advanced settings should only be changed for specific circumstances. Changes to the advanced settings could result in loss of Wi-Fi connection with your devices. Consult your devices' manuals for Wi-Fi specifications.*

- From the Web UI, click **Settings** > **Wi-Fi** > **Basic** to display the basic wireless network parameters.

Wi-Fi Basic Settings

Multi SSID

☐ ON
☒ OFF

Multi SSID Isolation

☐ ON
☒ OFF

☐ Allow guest Wi-Fi users to access the web interface.

Main Wi-Fi

Wi-Fi Name

FranklinWiFia-123456

Wi-Fi Password

0000000a

Privacy Separator

☒ ON
☐ OFF

SSID Stealth

☐ ON
☒ OFF

Any Connecting Rejection

☐ ON
☒ OFF

Authentication Method

WPA/WPA2-PSK

Encryption Method

AES-TKIP

Maximum Connections

Maximum Connections

10

Display Settings

Display Wi-Fi Name

☒ ON
☐ OFF

Display Wi-Fi Password

☒ ON
☐ OFF

Save Changes

Wi-Fi Settings Reset

This operation will return all Wi-Fi settings to the default.

Reset

- **Multi SSID:** Select ON if you like to set up a separate guest Wi-Fi network. Your R871 will broadcast two Wi-Fi Names.
 - ❖ If ON is selected for Multi SSID, **Guest Wi-Fi** menu will appears below Main Wi-Fi part. And Main Wi-Fi shared Maximum Connections with Guest Wi-Fi. You can change Guest Wi-Fi setting. And selected Off, Guest Wi-Fi menu will disappears.

Guest Wi-Fi

Wi-Fi Name
FranklinWiFib-123457

Wi-Fi Password
0000000b

Privacy Separator
☒ ON ☐ OFF

SSID Stealth
☐ ON ☒ OFF

Any Connecting Rejection
☐ ON ☒ OFF

Authentication Method
WPA/WPA2-PSK

Encryption Method
AES-TKIP

Maximum Connections


Maximum Connections
10

Main Wi-Fi
5
+


Guest Wi-Fi
5
+

- **Multi SSID Isolation:** If On is selected, it will prevents your devices from communicating across the Main and Guest Wi-Fi's.
- **Allow Guest Wi-Fi users to access the web interface:** If the box is checked, users on the Guest Wi-Fi also can access the Web User Interface.
- **Wi-Fi Name:** Service Set Identifier (SSID). To change it, enter a string less than 32 characters as the name for your wireless local area network (WLAN).
- **Wi-Fi Password:** To change, enter the new Wi-Fi password. The password needs to be at least 8 characters long.
- **Privacy Separator:** If ON is selected, your devices on the same Wi-Fi Name can't make Local Area Network communication. (Note: if you connect WLAN printer to your R871, Privacy Separator should be OFF to send file from your PC to the printer.)
- **SSID Stealth:** If OFF is selected, the Wi-Fi name won't be found by other device around it. s. You need to manually ether Wi-Fi name and connect.
- **Any Connection Rejection:** Any Connecting Rejection is a function of not returning Probe Response in response to Probe Request in which SSID is not specified (null) or Probe Request (SSID: any) which are transmitted from the client. (If SSID is set to "any" in the device, the device must respond to Probe Request (SSID: any).)
- **Authentication Method:** Use this setting to select the desired type of Wi-Fi security used to encrypt the wireless network. WPA2 is the latest and most secure method and should be used whenever possible..

- ❖ **Open** : Authentication and encryption won't be performed. There are risks that private info will be intercepted or network will be used by unauthorized individuals
- ❖ **SHARED** : Authentication via Shared Key protocol.
- ❖ **WPA2-PSK** : WPA-PSK is the securer version of WPA with implementation of the 802.11i standard.
- ❖ **WPA-PSK/WPA2-PSK** : Apply both the WPA-PSK and WPA2-PSK scheme.
- **Encryption Method**: Use this setting to select the desired type of Encryption Method used to encrypt the wireless network. Advanced Encryption Standard (AES) is the latest and most secure option and should be used whenever possible..
- **Maximum Connections**: Choose the maximum number of the devices which connect to your device simultaneously. You can also click the right or left arrow to distribute the maximum number of the connected devices between the Main Wi-Fi and the Guest Wi-Fi.
- **Display Wi-Fi Name**: If ON is selected, the Wi-Fi Name will be displayed on your R871 device display menu.




- **Display Wi-Fi Password**: If ON is selected, the Wi-Fi password will be displayed on your R871 device display menu.



- **Save Changes** : Select your desired setting from the Authentication, Wi-Fi password and/or available Wi-Fi connections drop down menu(s) and click Save Changes whenever you make a change to save the new setting.
- **Wi-Fi Settings Reset**: Click the **Reset** button to reset all Wi-Fi settings to the default.

Wi-Fi Advanced Settings

1. From the Web UI, click **Settings > Wi-Fi > Advanced**.

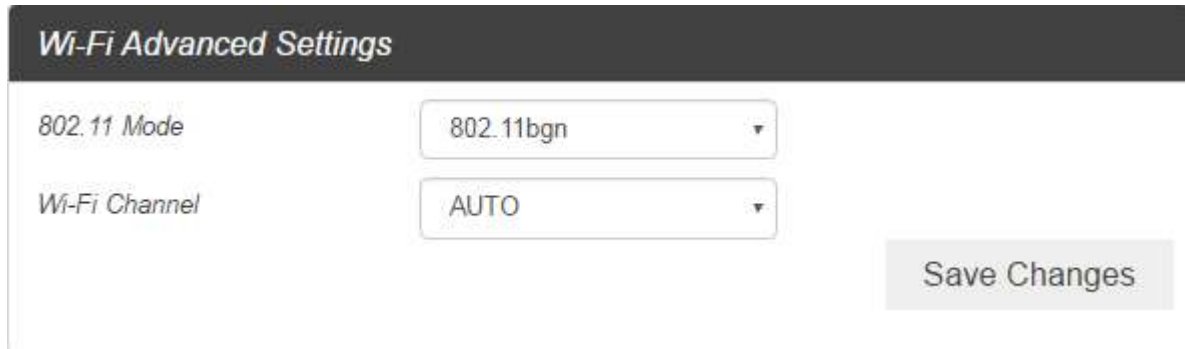

The screenshot shows the 'Wi-Fi Advanced Settings' page. It has a dark header with the title 'Wi-Fi Advanced Settings'. Below the header, there are two settings: '802.11 Mode' with a dropdown menu showing '802.11bgn' and 'Wi-Fi Channel' with a dropdown menu showing 'AUTO'. A 'Save Changes' button is located on the right side of the page.


- **802.11 Mode:** Use this setting to change the Wi-Fi mode. The wireless network technology used. 802.11g+ 802.11b + 802.11n is most compatible, allowing both 802.11b,802.11g,and 802.11n devices to connect to the wireless network..

2. Click **Save Changes** to save your settings.

Mobile Network

Mobile Settings

1. From the Web UI, click **Settings > Mobile Network > Mobile Settings**. The Mobile Settings page is shown in the following figure.

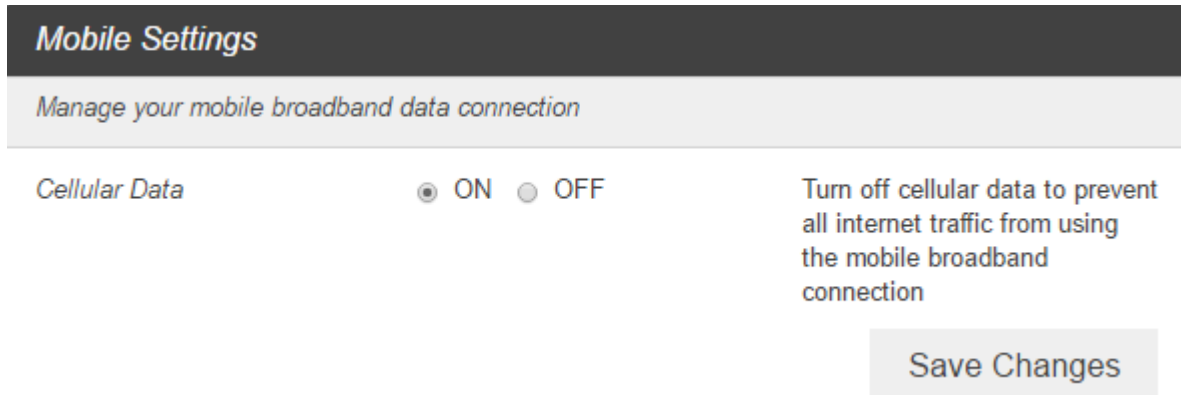

- **Cellular data:** Turn Cellular data on or off. Turn it OFF to prevent all Internet traffic from using the mobile broadband connection.

2. Click **Save Changes** to save your settings.

APN

- From the Web UI, click **Settings > Mobile Network > APN**. The default APN parameters are shown in the following figure. You can use the default APN to connect to the Internet. You can also add new APNs.

APN Settings

Active	Name	APN	Username	Password	Authentication	Delete
<input checked="" type="radio"/>	ota	otasn			PAP ▼	

Add

Save Changes

- To add a new APN, follow the steps below:

- Click **Add** to access the following page.

APN Settings

Active	Name	APN	Username	Password	Authentication	Delete
<input checked="" type="radio"/>	ota	otasn			PAP ▼	
<input type="radio"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	PAP ▼	OK Cancel

Add

Save Changes

- Enter the related parameters as described in the following table.

Parameters	Description
Name	Type the profile name.
APN	Type the APN string.
User name	User name is used to obtain authentication from the ISP when the connection is established.
Password	Password is used to obtain authentication from the ISP when the connection is established.

Parameters	Description
Authentication	Password Authentication Protocol (PAP) provides a simple method without encryption for the peer to establish its identity using a 2-way handshake. Challenge-Handshake Authentication Protocol (CHAP) is used to periodically verify the identity of the peer using a 3-way handshake.

3. Click **Save** to add the new APN.

■ **Additional APN Options**

APN Settings

Active	Name	APN	Username	Password	Authentication	Delete
<input checked="" type="radio"/>	ota	otasn			PAP ▼	
<input type="radio"/>	Test	testwork	test	test001	PAP ▼	Edit Delete

Add

Save Changes

- To activate the new APN, check the circle in front of it and then click **Save Changes**.
- To edit the new APN, click **Edit**, change the settings, and then click **Save**.
- To delete the new APN, click **Delete**.

Note: The default APN cannot be edited or deleted.

SIM

- From the Web UI, click **Settings > Mobile Network > SIM**. The SIM PIN lock is disabled by default. You can enable it by entering SIM PIN.

SIM

The SIM card inside your device can be locked using a PIN. If the SIM card is locked you must enter the PIN below before you are able to connect to the internet.

<i>SIM Status</i>	Disabled
<i>Desired Action</i>	<div>Enable PIN ▾</div>
<i>Enter Current PIN</i>	<div></div>

3 attempts remain until your sim is PUK locked.

Entering an incorrect PIN too many times will PUK lock your SIM and you will unable to use this device. You will need to contact your service provider to unlock the SIM.

Save Changes

- Enter the SIM PIN and press “Save Changes”. The SIM Status will be changed to Enabled. Once the SIM PIN Lock is enabled, you need to enter SIM PIN to connect to the mobile broadband network each time you power on your R871.

Note: If you enter the wrong SIM PIN three times, your SIM will be disabled permanently until you enter the PUK code from your service provider.

Advanced

- From the Web UI, click **Settings > Mobile Network > Advanced** to set the mobile network advanced settings on this interface.

Advanced

Manage your mobile bradband data connection

Factory Reset

This operation, also called Reverse Logistics, will display provisioning information and reset the modem to the factory default values. The MSL is needed to perform a reset.

Factory Reset

- **Factory Reset:** Click **Factory Reset** to reset the modem to the factory default value.

Device

The Device settings menu lets you set display brightness, manage account password, update software, back up, restore and check system log.

Preferences

1. From the Web UI, click **Settings > Device > Preferences**. You can set the display timeout on this page.

Preferences

Display

Device Display Timeout 30 seconds ▼

LED

LED Enable ☒ ON ☐ OFF

Save Changes

- **Display Timeout:** Select a timeout time from the drop-down list. Your R871 display turns off after this timeout period if there is no menu button action.
- **LED Enable:** If ON is selected, the LED indicator next to Your R871 display will blink when the device is on. This LED is a power indicator that shows the device is on when the device display is off.

2. Click **Save Changes** to save your settings.

Web Interface

1. From the Web UI, click **Settings > Device > Web Interface**. You can manage your Web UI admin password on this page.

Web Interface

Display Password

☒ ON ☐ OFF

Save Changes

Change Password

You can change the password for this Web Interface. You will be locked out if you enter an incorrect password too many times.

Enter Current Password

Enter New Password

Confirm New Password

Save Changes

- **Display Password:** If ON is selected, the Web Interface admin password is displayed on your R871 device display menu.

Admin Password :
password

- **Change Password**
 - **Current Password:** Enter the current password.
 - **New Password:** Enter the new password.
 - **Confirm New Password:** Enter the new password again.

2. Click **Save Changes** to save your settings.

Software Update

1. From the Web UI, click **Settings > Device > Software Update**. You can update the software on this page.

Software Update

Firmware

Current Software Version R871F10.FR.A743

Upload Software

Choose File No file chosen

Upload Software

2. Read the onscreen options and click the update you would like to initiate.

- **Update Software:** If you have a new software file provided by your service provider, you can select the file and update your R871 manually by pressing Update Software button.

Backup and Restore

- From the Web UI, click **Settings > Device > Backup and Restore** to access menus to back up your device settings to your computer, restore from the backup and restore your device to its factory default settings.

Backup and Restore

Back up your device settings and preferences to your computer. Please note the backup will only with this particular device.

Download Backup

Download a copy of your device settings so you can restore it later.

Back Up Now

Restore from Backup

Upload settings from a previously saved backup file.

Choose File No file chosen

Restore Now

Restore Device to Factory Defaults

Restore all user settings to the default settings.

Restore Factory Defaults

To back up your device settings to your computer, follow the steps below:

1. Click **Back Up Now**.
2. Click **Save** on the pop-up window.
3. Choose a location on your computer to save the backup file.
4. Click **Save**.

To restore from the backup, follow the steps below:

1. Click **Select File** to select the backup file in your computer.
2. Click **Restore now**.

To restore your device to its factory default settings, follow the steps below:

1. Click **Restore factory default**.
2. Click **Yes** to confirm the command.

System Logs

- From the Web UI, click **Settings > Device > System logs**, and then click **Download logs** to download the system logs on this page.

System Logs

Enable Logs

☒ ON ☐ OFF

Save Changes

[2015/09/22 11:11:00] UICC Deactivated
[2015/09/22 11:11:00] UICC Activated
[2015/09/22 11:11:02] UICC Deactivated
[2015/09/22 11:11:02] Network State : No Network
[2015/09/22 11:24:02] 1 stations are connected.
[2015/09/22 11:26:07] 0 stations are connected.
[2015/09/22 11:26:12] 1 stations are connected.
[2015/09/22 11:26:53] 0 stations are connected.
[2015/09/26 21:07:45] UICC Deactivated
[2015/09/26 21:07:47] Network State : No Network
[2015/09/27 05:48:19] 1 stations are connected.
[2015/09/27 05:48:24] 0 stations are connected.
[2015/09/27 05:49:55] 1 stations are connected.
[2015/09/27 05:50:05] 0 stations are connected.
[2015/09/27 05:51:15] 1 stations are connected.
[2015/09/27 05:51:25] 0 stations are connected.
[2015/09/27 05:55:21] 1 stations are connected.
[2015/09/27 05:55:31] 0 stations are connected.
[2015/09/27 09:40:14] UICC Deactivated
[2015/09/27 09:40:16] Network State : No Network
[2015/09/27 09:41:30] 1 stations are connected.
[2015/09/27 09:43:15] UICC Deactivated
[2015/09/27 09:43:17] Network State : No Network

Refresh

Clear Logs

Download Logs

Note: System logs are used for engineering purposes by your service provider. Keep it OFF during regular usage of your device.

Advanced Router

LAN Settings

1. From the Web UI, click **Settings > Advanced Router > LAN Settings** to display the router information shown in the following figure.

LAN Settings

Manage your mobile broadband data connection

IP Address	192.168.128.1	Network Access Identifier
Subnet Mask	255.255.255.0	
VPN Passthrough	<input type="radio"/> ON <input checked="" type="radio"/> OFF	
DHCP Server	<input checked="" type="radio"/> ON <input type="radio"/> OFF	
DHCP IP Range	192.168.128.10 ~ 192.168.128.100	
DHCP Lease Time	86400	

DNS Mode

Your device automatically selects a Domain Name Server (DNS) or you can manually select one.

DNS Manual Mode	<input type="radio"/> ON <input checked="" type="radio"/> OFF
UPnP	<input checked="" type="radio"/> ON <input type="radio"/> OFF
Out of Service Notification	<input type="radio"/> ON <input checked="" type="radio"/> OFF
NAT Timeout	300

Save Changes

- **IP Address:** IP address for Web User Interface.
- **Subnet Mask:** Subnet mask for the IP address.
- **VPN passthrough:** VPN passthrough must be enabled if you want to allow VPN tunnels to pass through your device's firewall.
- **DHCP Server:** Enable or disable DHCP Server function.
- **DHCP IP Range:** Allocate begin and end IP address for IP Range.

- **DHCP Lease Time:** Define how long the leased IP address will be expired. The new IP address will be relocated after the IP address is expired.
- **DNS manual mode:** Turn DNS manual mode on or off.
- **UPnP:** Turn UPnP (Universal Plug n Play) mode on or off.
- **NAT Timer:** Set TCP NAT time.

2. Click **Save Changes** to save your settings.

Firewall

1. From the Web UI, click **Settings > Advanced Router > Firewall**. You may set up firewall rules to protect your network from virus and malicious activity on the Internet.



Firewall

IP address filter function and WAN port ping reply function are only available when firewall is enabled.

Firewall Switch ☐ ON ☒ OFF

Save Changes

■ IP Address Filtering

To set IP Address Filtering rules, follow the steps below:

Firewall

IP address filter function and WAN port ping reply function are only available when firewall is enabled.

Firewall Switch
☒ ON
 ☐ OFF

IP Address Filtering

IP Address Filtering
☐ ON
 ☒ OFF

Filter packets using the following rules when specified with protocol, port and IP address.

Portmapping

Portmapping
☐ ON
 ☒ OFF

Portmapping enables computers to access WWW, FTP or other services provided by the LAN

Save Changes

- ① Turn on the Firewall Switch.
- ② Turn on the IP Address Filtering.
- ③ Click **Add**.

IP Address Filtering

IP Address Filtering
☒ ON
 ☐ OFF

Filter packets using the following rules when specified with protocol, port and IP address.

- LAN/WAN port: The Value range is 1 ~ 65535.

- Settings not enabled until applied.

Name	WAN IP Address	WAN Port	Protocol	Status	Options
<input type="text"/>	<input type="text"/>	<input type="text"/>	TCP ▼	ON ▼	OK Cancel

Add

- ④ Enter the related parameters as described in the following table.

Parameters	Description
LAN IP address	Enter the LAN IP address.
LAN port	Set the LAN port.

Parameters	Description
WAN IP address	Enter the WAN IP address.
WAN port	Set the WAN port.
Protocol	Set which protocol will be used for filtering.
Status	Set how to handle the packet if it matches with the rule.

- ⑤ Click **Save Changes** to add the new filtering rule.

■ Portmapping

To set portmapping rules, follow the steps below:

- ① Turn on the Firewall Switch
- ② Turn on the Portmapping.
- ③ Click **Add**

Portmapping

Portmapping

☒ ON
☐ OFF

Portmapping enables computers to access WWW, FTP or other services provided by the LAN

- IP Address: Specify LAN address. Packets which match the specified conditions will be forwarded to this address.
- LAN/WAN port: Port of the computer providing services. It is a single port with value range of 1 ~ 165535.
- Protocol: Protocols applied by services.
- Settings not enabled until applied.

Name	WAN Port	LAN IP Address	LAN Port	Protocol	Status	Options
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	TCP ▼	ON ▼	OK Cancel

Add

- ④ Enter the related parameters as described in the following table.

Parameters	Description
Name	Enter a name for the rule.

Parameters	Description
WAN port	Set the WAN port.
LAN IP address	Enter the LAN IP address.
LAN port	Set the LAN port.
Protocol	Set which protocol will be used for filtering.
Status	Set how to handle the packet if it matches with the rule.

2. Click **Save Changes** to save your settings.

About

Show your device's connection information, firmware information, WWAN information, Wi-Fi details and device information.

- From the Web UI main screen, Click the **About** tab to view the available information.

Account

My Number	7692306276
MSID	6013333301
MEID	99000095742208
ICCID	8901230000009608072
IMSI	311230000960807
IMEI	990000957422084
PRL ID	20027

Device

Model	Franklin R871
Manager	my.hotspot
Hardware Revision	P2
Power State	Online
Current Temperature	31°C
Current Voltage	3.788V
Battery Charge Level	11%
Battery Status	Charging

Wi-Fi Details

Wi-Fi Name	C Spire R871a 3094
Wi-Fi Password	ab4e71b9
MAC Address	F4:63:49:24:30:94
Encryption	WPAWPA2 AES
Wi-Fi Devices	2
Max Wi-Fi Devices	10
Broadcast Network Name	Show

WWAN Info

IP Address	10.249.2.9
Lifetime Transferred	1.06 GB

Firmware

Firmware Version	R871F10.FR.M743
Build Date	Feb 4 2017
Web App Version	R871F10.FR.A743
Bootloader Version	R871F10.FR.B743

Save to File

Debug Info

View detailed diagnostic information about your device.

Debug

Support Tab

Obtain support information on this interface.

- From the Web UI main screen, click the **Support** tab to view the available options.

<div>User Guide</div> <div>Download</div>	<div>Manage Your Account</div> <div>Your Account Log in to your account for your current plan and billing information.</div>
<div>Web Address</div> <div>Device Support Go to Support, find information on your device along with videos, tutorials, and community forums for your device.</div>	<div>Manufacturer</div> <div>franklinwireless.com Check out troubleshooting and other help manuals at the manufacturer's website.</div>

Appendix

The following topics cover items such as troubleshooting, device specifications, applicable warranty and service information, customer service contacts, and applicable trademark and copyright notices.


Troubleshooting

When properly installed, your device is highly reliable product. If you are having problems, consult this list of common problems and their solutions.

Problems and Solutions

No service is available, or, I get a "No Services" message.

- Reorient your device. Inside of a building or near a structure that maybe blocking the signal, change the position or location of the device. For example, try moving your device close to a window.
- You are outside the service coverage area, or there may be a problem with your account.
- From device LCD



The device has no power, or the LED indicator does not come on when the power button is pressed.

- Make sure the battery is properly seated in the device.
- Make sure the battery is fully charged. Plug in the AC charger for at least four hours.

I forgot my password.

- Reset the device to factory defaults using the master reset button. Hold the button down for three seconds to reset your router hardware and for three seconds to reset both your router hardware and your device software. (Check the master reset button on [Parts and Functions > Device Layout](#))
- You can also connect your device to an electrical outlet using the AC adapter and go to the operating system (<http://192.168.128.1>) to view your security code.

I cannot connect to my device.

- Make sure your Windows Wi-Fi adapter/Mac Wi-Fi is turned on.
- (Refer to your computer's Help if you need assistance.)
- Open your wireless network connection list:
 1. Windows: Right-click icon and select **View Available Networks**.

– Or –

Mac: Pull down list from Wi-Fi icon.

2. Windows: Click **Connect**.

– Or –

Mac: Select the network name.

3. When your device is connected to the network, the Wi-Fi connected device icon displayed on LCD Screen.

My network does not appear in the wireless network list.

- Verify that your device's LCD doesn't display Wi-Fi connected device icon.
- Windows: Click **Refresh Network List** on the left side of the Wireless Network Connection screen. If that does not work you can try the following:
 1. Open **Network Connections**.
 2. Right-click **Wireless Network Connection** and select **Properties**.
 3. Click the **Wireless Networks** tab.
 4. Delete any unused wireless connections from the Preferred Networks list and click **OK**.
 5. Restart your computer.
- Mac: Click the AirPort icon and select **Turn Wi-Fi Off**. Then click it again and select **Turn Wi-Fi On**.

I see the network name but cannot connect to my device.

- Check the Wi-Fi Name, Wi-Fi Password in your connection profile. If any of these are incorrect, you will not be able to connect to the network

How do I disconnect from the network?

1. Open your device's landing page.
2. Log in as the administrator if you have not already done so.
3. Click Disconnect.

How can I find out how many users are connected to my device?

- See the device's LCD. The number of clients (users) currently connected to your device is in the Wi-Fi connected device icon at the top of the LCD. You can also see the number of clients currently connected on the Connected Devices page on Web UI.

Where can I find information about Internet connectivity and my Wi-Fi setup?

- Open the [Settings](#) page on Web UI.

How do I check the model number and firmware versions of my device?.

- Open the [About](#) page on Web UI.

How can I check the battery level of my device?

- From the Web UI: Open the About. You can find Device sector, there are **Battery Charge Level**.
- On the device: Battery icon displayed at the top of the LCD Screen,

How do I check the available space on the Nano-SIM card?

- Open the Web UI. Open **Settings > Mobile Network > SIM** page and see the SIM Card status information.

How do I turn off my device?

- Press and hold the power button for three seconds until the LCD turns off. Your device is connected to the AC adapter and being charged.

What is the default administrative/login password?

- password

How do I access information on the Wi-Fi network and Wi-Fi clients?

- Open the WebUI and choose **Settings > Wi-Fi > Basic** and see the current Wi-Fi Network and Wi-Fi Clients information.

I am having trouble connecting to my office VPN.

- Open the WebUI and choose **Settings > Advanced Router > LAN Settings**. Select the VPN Passthrough ON checkbox and click **Save Changes**.

Using the Factory reset button

- Your device comes with a factory reset button that allows you to return it to its factory default state.
- The factory reset button is accessed through an opening labeled “RESET” on the back cover of the device. You need a paperclip or similar object to press the button.

Note: To reset both the router hardware and the device software to the original factory settings:

1. Make sure your device is powered on.

2. Remove the back cover and locate the opening on the back of the device labeled “RESET.”

3. Insert a paper clip in to the hole and hold the button down for three seconds until the displayed "Factory Reset Restarting..."

- Your list of wireless networks will now show the original default network when you first configured your device.

- Connect to your device again and reconfigure it. You will need to use the original password (“password”) to complete the setup and assign a new unique password.

Specifications

The following tables list the specifications for the mobile broadband device, the AC charger, and the materials.

Mobile Broadband Device Specifications

Item	Description
Model name	R871 Mobile Hotspot
Dimensions ¹	12.5mm (H) x 90.1mm (W) x 67mm (D)
Weight	97g
Interface	Web UI
Power consumption	Normal state: 1.26 Watts Max state : 2.52 Watts
Operating system	Linux OS

Item	Description
Frequency	<p>LTE B2</p> <p>DL: 1930 ~ 1990 MHz UL: 1850 ~ 1910 MHz</p> <p>LTE B4</p> <p>DL: 2110 ~ 2155 MHz UL: 1710 ~ 1755 MHz</p> <p>LTE B5</p> <p>DL: 869 ~ 894 MHz UL: 824 ~ 849 MHz</p> <p>LTE B12</p> <p>DL: 729 ~ 746 MHz UL: 699 ~ 716 MHz</p> <p>LTE B25</p> <p>DL: 1930 ~ 1995 MHz UL: 1850 ~ 1915 MHz</p> <p>LTE B26</p> <p>DL: 859 ~ 894 MHz UL: 814 ~ 849 MHz</p> <p>LTE B41</p> <p>DL: 2496 ~ 2690 MHz UL: 2496 ~ 2690 MHz</p> <p>WIFI(B/G/N)</p> <p>2412MHz ~ 2462MHz</p>
Compatible networks	LTE category 4 / Wi-Fi IEEE802.11 b/g/n
Charging time ²	3 hours 40 minutes
Continuous standby time ³	41 hours
Continuous communication time ³	8 hours
Communication speed	<p>LTE category 4</p> <p>DL : 150Mbps</p> <p>UP : 50Mbps</p>

¹ Approximate values

² Varies by ambient temperature, battery usage, etc.

³ Varies by environment, signal conditions, etc.

AC Charger Specifications

Item	Description
Rated input voltage	100-240Vac
Operating range	90-264Vac
Rated input frequency	50/60Hz +/- 3Hz
Nominal dc output voltage	+5.0V ($\pm 5\%$)
Rating load current	1.0A

Materials Specifications

Parts	Materials/Finishing
A cover	PC(Black),SF coating
B cover	PC(Black)
Battery cover	PC(Black),SF coating
A deco	PC(Black),UV(Gloss 80%)
Power key	PC(Milky White),Spray(Black),UV(Gloss 80%)
LCD Bracket	PC(Black)
Rubber feet	Silicon(Black)

Warranty and Service

The following topics outline your device's warranty and service information.

Warranty

Your device purchase includes Warranty.

- Confirm shop name and purchase date.
- Read contents of Warranty and keep it in a safe place.
- Check warranty period in the Warranty.

Services

Before submitting your device for repairs, contact Customer Service or General Information; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the Warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Customer Service

For mobile broadband device or service information, call general information. For repairs, call customer assistance.

Trademarks and Copyrights

The names of companies, products, and services used in this guide are registered trademarks or trademarks of the respective companies.

- Franklin Wireless logo is trademarks or registered trademarks of Franklin Wireless Corporation in US. Copyright © 2016 Franklin Wireless Corporation. All rights reserved.

Safety and Notices

The following topics address important safety precautions, general notes, and required RF exposure information for your mobile broadband device.

Safety Precautions

The following topics outline important safety precautions that must be observed when using your device.

Important Notice

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the Pocket Wi-Fi are used in a normal manner with a well-constructed network, your device should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Franklin accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using your device, or for failure of your device to transmit or receive such data.

Safety and Hazards

Do not operate your device under the following conditions.

- In areas where blasting is in progress
- Where explosive atmospheres may be present
- Near medical equipment
- Near life support equipment, or any equipment that may be susceptible to any form of radio interference.

In such areas, your device **MUST BE POWERED OFF**. Your device can transmit signals that could interfere with this equipment.

Do not operate your device in any aircraft, whether the aircraft is on the ground or in flight. In aircraft, your device **MUST BE POWERED OFF**. When operating, your device can transmit signals that could interfere with various onboard systems.

Note: Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Your device may be used at this time.

The driver or operator of any vehicle should not operate the device while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some jurisdictions, operating such communications devices while in control of a vehicle is an offense.

Proper Battery Use and Disposal

Follow these guidelines to ensure safe and responsible battery use.

- Do not open, disassemble, puncture, crush, bend, or shred.
- Do not expose to water or other liquids, fire, explosion, or other hazards.
- Use the battery only in the Pocket Wi-Fi.
- If using with a charger, use only the AC charger supplied with your device.
- Do not short circuit the battery.
- When replacing a battery, use the same model of battery that was supplied with your device.
- Follow local regulations when disposing of a used battery.
- Avoid dropping your device or the battery. If dropped and you suspect damage, take it to a service center for inspection.
- Battery usage by children should be supervised.

Note: Improper battery use may result in a fire, explosion, or other hazard.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Information and Specific Absorption Rate (SAR) Information

The following topics detail the specific absorption rate (SAR) information, electromagnetic safety information, and radiofrequency (RF) exposure information for this device.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Safety and Notices 90

The exposure standard for wireless employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of <http://fcc.gov/oet/ea/fccid> after searching on **FCC ID: XHG-R871**

More information on the device's SAR can be found from the following FCC website:
<http://fcc.gov/oet/ea/fccid>.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

SAR compliance for body operation is based on a separation distance of 10 mm between the unit and the human body. Carry this device, at least 10 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 10 mm between this and your body.

Index

- Android Device
 - Connect Wi-Fi, 19
- Battery
 - Charge, 11
 - Install, 10
- Customer Service, 50
- Data Transfer Speed, 6
- Device Layout (illustration), 4
- Home Screen, 5
- Mac
 - Connect Wi-Fi, 15
- Network Name, 3
- Operating System, 2
- OS, 2
- Package Contents, 2
- Power Key, 5
- Power Off, 13
- Power On, 13
- Safety Precautions, 51
- Security Key, 3
- Services, 50
- Settings, 20
- SIM Card, 7
- Insert, 8
- Specifications
 - AC charger, 49
 - Materials, 49
 - Mobile broadband device, 47
- SSID, 3
- Status Bar Icons, 6
- Transfer Speed, 6
- Troubleshooting, 44
- Turn Device Off, 13
- Turn Device On, 13
- USIM Card, 7
 - Insert, 8
- Warranty, 49
- Wi-Fi
 - Activate, 14
 - Connect Mac, 15
 - Overview, 14
- Wi-Fi Network Name, 3
- WLAN
 - Activate, 14
 - Overview, 14