



How to update your Windows Phone

Use these steps to update your phone to the latest version of Windows Phone.


Updating on a PC

1

Notification

When an update is available, a notification will appear.

- ⚠ **Tip:** To check if notifications are switched on, flick left from the Start screen to the App list and tap **Settings**. Then tap **Phone update**.

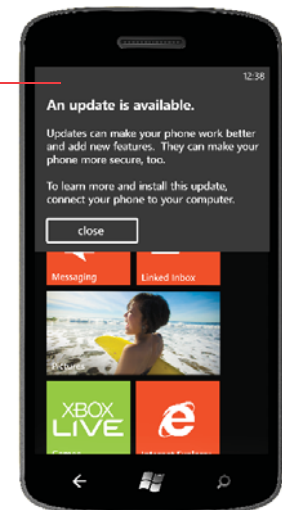

2

Connect by USB

Using the USB cable that came with the phone, connect your phone to the PC.


- ⚠ **Tip:** The computer must be connected to the internet.

3

Update Automatically

Once the phone is connected, Zune® will launch automatically.

- Run the Zune software if it doesn't start by itself. Then select **Settings > Phone > Update**.
- If the PC doesn't have Zune software installed, it will prompt you to download and install it. You can get it for free at www.zune.net/setup.
- Click **Update Now**.

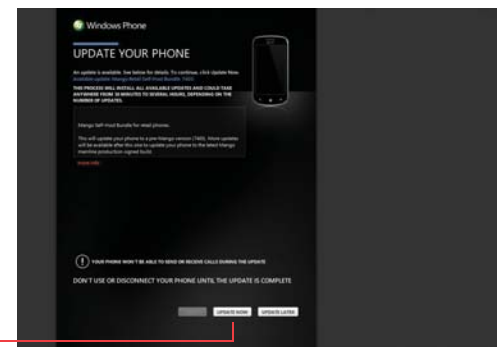

- ⚠ **Tip:** Before beginning the update process, make sure your PC has enough free space available on the hard drive to ensure a smooth update process.

- ⚠ **Tip:** Once the update is started, it generally takes about 30-60 minutes to complete. You won't be able to make or receive calls during the update.



Updating on a Mac

Mac users should follow the steps below to install the update. You will need the Windows Phone 7 Connector for Mac software.

1

Notification


When an update is available, a notification will appear.

! **Tip:** To check if notifications are switched on, flick left from the Start screen to the App list and tap **Settings**. Then tap **Phone update**.

2

Connect by USB

Connect the phone to your Mac using the USB cable that came with your phone. Windows Phone 7 Connector for Mac should open automatically. If it does not, in the Applications folder, click **Windows Phone 7 Connector for Mac**.

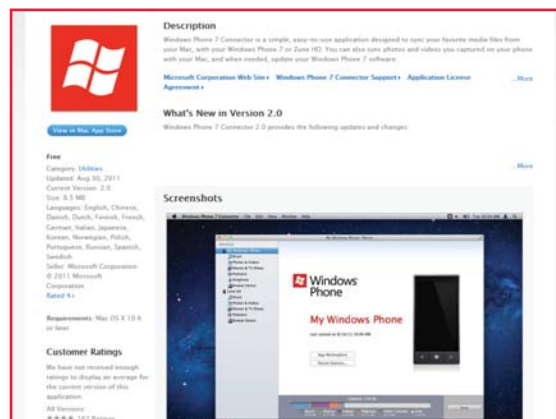

! **To install the Windows Phone Connector software:**

- Open the App Store on a Mac.
- Search for "Windows Phone 7 Connector" and click on the appropriate search result.
- Click on the "Free" button to start the installation process (sign in if necessary).
- After installation completion, the Windows Phone 7 Connector for Mac software should load to the dock.

3

Update with Windows Phone 7 Connector for Mac

In the navigation pane, click the device name and not the media type. Then click **Install Updates**.

! **Tip:** If the update process does not start automatically in the Connector software, select **Device Options > Check For Update**.